

HYPER8.5

RTR WITH PRO PERFORMANCE

RTR

ADVANCED EDITION

Specially included the following upgrades:

- New Hyper 21 3P Race Engine
- New FR2 Extended Chassis
(2mm front and rear)
- Big Bore Shock
- 9kgs Heavy Duty
Steering Servo
- Dish Racing Wheels

HO BAO

HO BAO ENTERPRISING CO., LTD.

WWW.HOBAO-RACING.COM

MADE IN TAIWAN



BUILDING INSTRUCTIONS

1 2

Assembly Steps of Differential

27 28 29 30

Assembly Steps of Rear Suspension

47 48 49 50

Assembly Steps of Radio Tray

3

Assembly Steps of Front Gear Box

31 32

Assembly Steps of Rear Stabilizer

53 54 55 56 57

Assembly Step of Linkages

4

Assembly of Shock Stay

33

Assembly of Rear Brace

58 59

Assembly Steps of Air Filter

7 8 9

Assembly Steps of Servo Saver

34 35 36

Assembly Steps of Center Differential

60

Assembly of Side Guard

10 11 12 13 14 15

Assembly Steps of Front Suspension

37 38 39

Assembly Steps of Clutch

61 62 63 64 65 66

Assembly Steps of Shock Absorbers

16 17

Assembly Steps of Front Stabilizer

40

Assembly of the Engine

67 68 69

Assembly Steps of Tires

18 19

Assembly Steps of Steering Rod

41 42

Assembly Steps of Fuel Tank

70

Assembly of Rear Wing

20 21

Assembly Steps of Rear Gear Box

43

Assembly of Manifold and Muffler

71

Assembly of the Body Shell

22 23

Assembly Steps of Rear Shock Stay

44

Assembly of Fuel Tube


24 25

Assembly Steps of Wing Mount


45 46 51 52

Assembly Steps of Receiver Box


Curved scissors

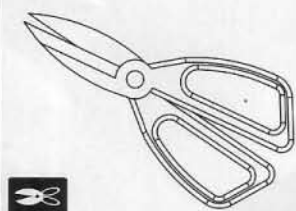



Long nose pliers

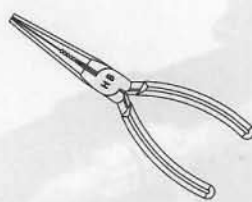

Modelling knife

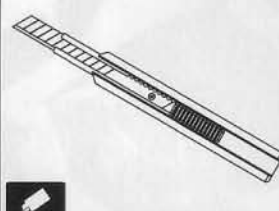


Wrench

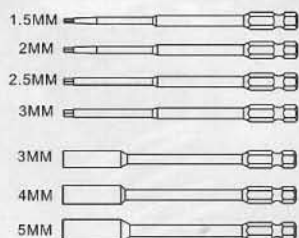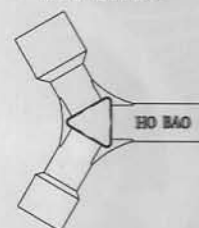


SCREWDRIVER

SCREWDRIVER (LARGE)

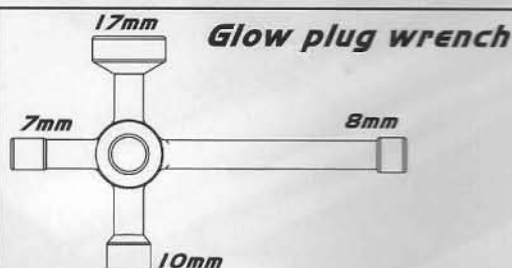


Glow plug wrench

Hex wrench with

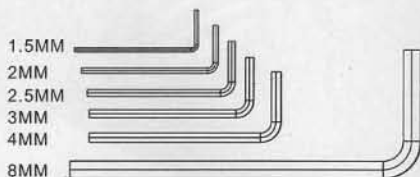


Instant cement

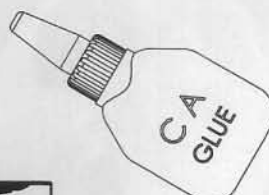

Silicone oil




Screw cement

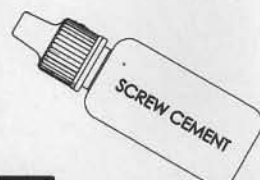


Shock oil



Grease

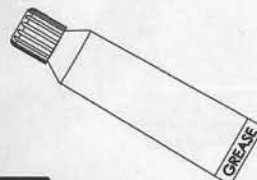

Air filter oil

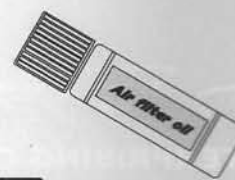



TOOLS RECOMMENDED

87001S x8
3x10mm
F/H screw


33312 x4
3x12mm
screws

2

3 Assembly of Front Gear Box

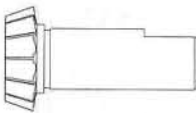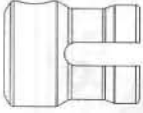-  87021 x1
5x4mm
Set screw
-  88117 x1
Drive pinion gear
-  87021 x1
Center joint cup
-  84076 x2
8x16mm
Ball bearing
-  33315 x2
3x15mm
screws
-  88002 x2
4x47mm
screws


3 Assembly of Front Gear Box

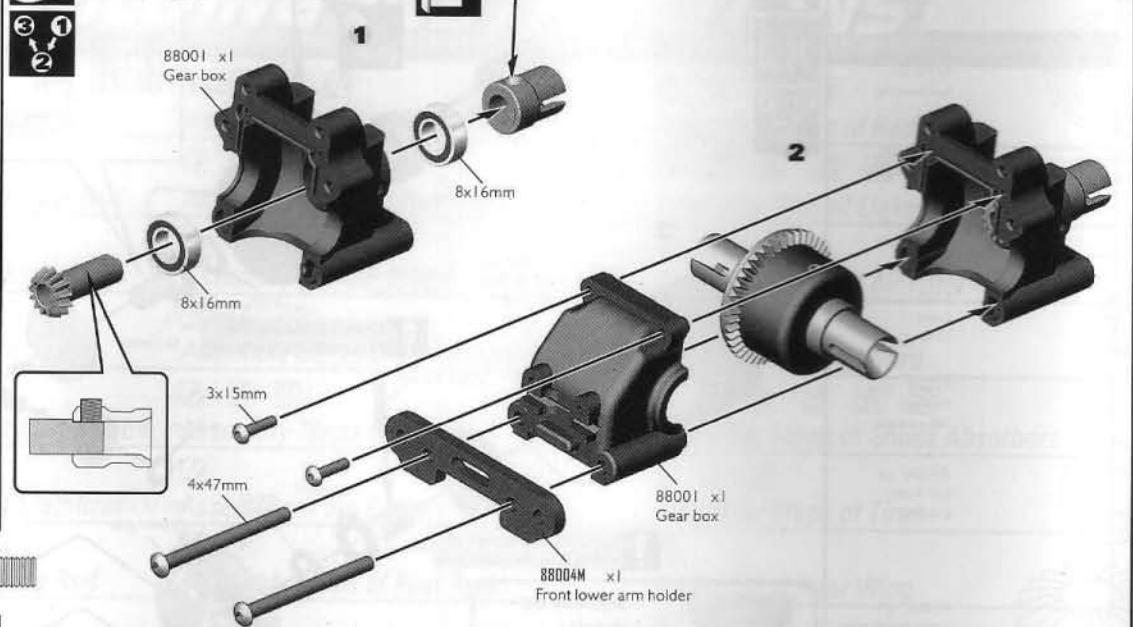

4 Assembly of Front Shock Stay

-  88094x2
Steel shock ball
-  33315 x2
3x15mm
screws
-  32316 x2
3x16mm
Cap screws
-  88115 x2
Alum collar


4 Assembly of Front Shock Stay

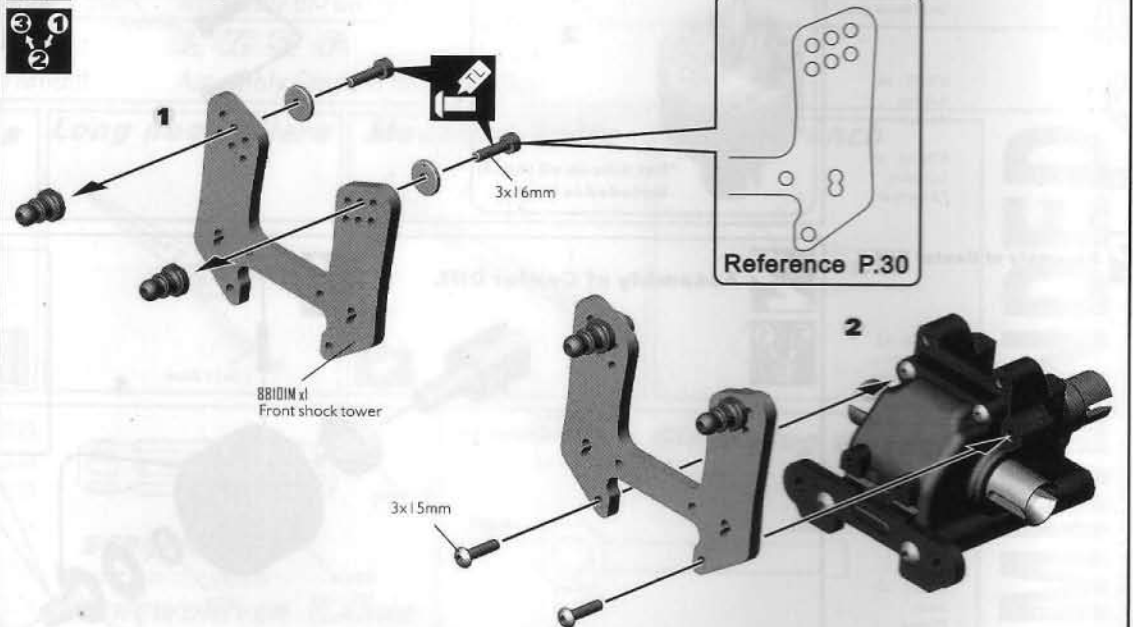


5 Assembly of Kick up & Anti-squat Angle Preset

-  31414 x4
4x14mm
F/H screw
-  88027 x2
Kick up bushing
-  88027 x2
anti squat bushing

5 Assembly of Kick up & Anti-squat Angle Preset

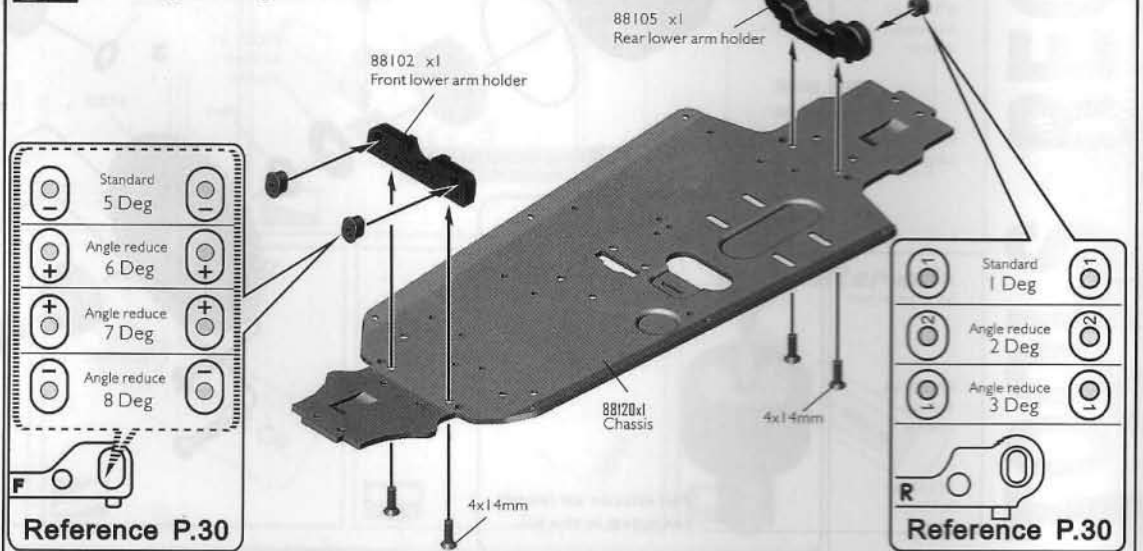

 6 Assembly of the Front Diff. onto Chassis



31416T x2
4x16mm
TP/FH screws


7 Assembly of Steering servo saver Arms



88016 x1
Alum saver post



88018 x2
Steel shaft

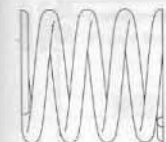

88016 x1
steel spring



88016 x1
Alum nut



87060 x4
6x10mm
bushing



88016 x2
bushing

8 Assembly of Front bulkhead tie Brace and Steering unit



33312T x1
3x12mm
Tapping screw



31310 x2
3x10mm
F/H screws



 
31314 x2
3x14mm
F/H screws



88020 x4
ALU. Collar



88020 x2
Screw Cap



88024 x1
Front Body post



88027 x2
Kick up bushing



88020 x2
5x10x1mm
Washer

6 Assembly of the Front Diff. onto Chassis

4x16mm x2
F/H screws

7 Assembly of Steering servo saver Arms

6x10mm

88017 x1
Servo saver arm

88017 x1
Servo saver arm

6x10mm

88017 x1
Servo saver arm

6x10mm

8 Assembly of Front bulkhead tie Brace and Steering unit



Angle reduce
0 Deg
Standard
+3 Deg

Reference P.30

3x10mm

88103Mx1
Steering plate

5x10mm

3x14mm

2

3x12mm

8812x1
front top plate

 
1

88006 x1
plastic front upper arm holder

9 Assembly of Steering Arms system onto Chassis




31414 x2
4x14mm
TP/FH screws



33312T x2
3x12mm
Tapping screw

9 Assembly of Steering Arms system onto Chassis

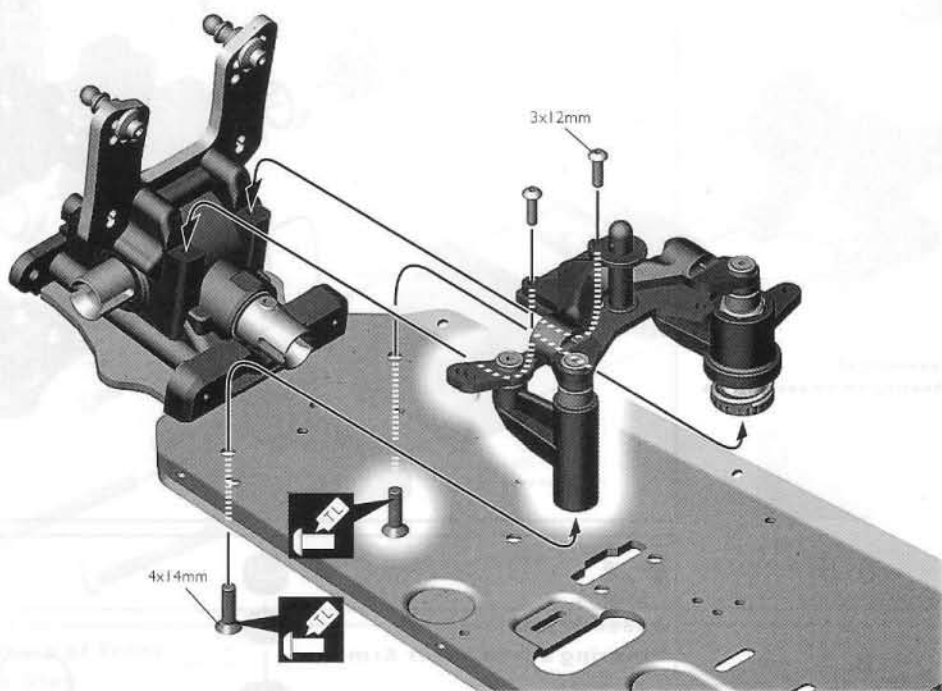

10 Assembly of Front Upper Arms



88031 x2
7.8mm
ball




88113 x2
5x30mm
screws



88007 x2
Ball end

10 Assembly of Front Upper Arms

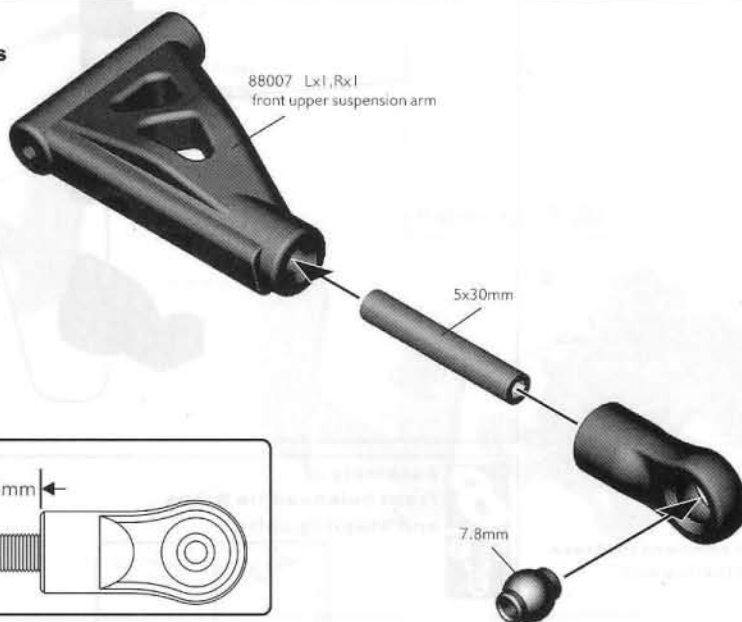


11 Assembly of Front Universal Joint Shaft



38505 x2
5x5mm
Set screws



87027 x2
2.5x16.8mm
Shaft

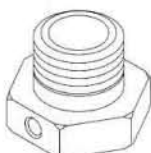


87027 x2
Wheel hub set



84076 x4
8x16mm
Ball bearing

11 Assembly of Front Universal Joint Shaft

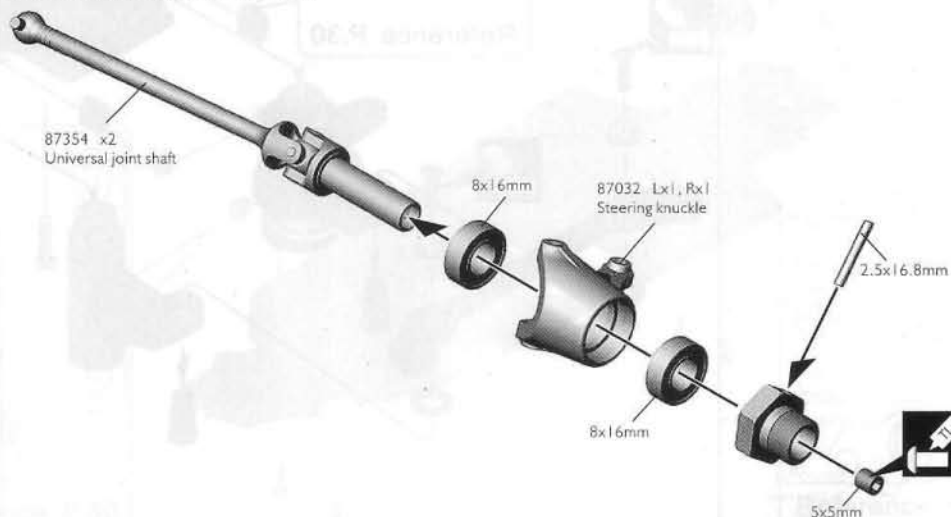

12 Assembly of Steering Knuckle

- 33410 x2
4x10mm
Tapping screws
- 88010 x4
4x12mm
Tapping screws
- 88010 x4
Steel collar
- 88010 x4
4x8mm
washer

King pin bushing 88011



18°



20°



22°

13 Assembly of Front Suspension Arms

- 32322 x2
3x22mm
Cap screws

- 88015 x2
3x30.8mm
Shaft

- 39008 x2
3mm
Nylon nut

- 33405 x2
4x5mm
screw

- 38410 x2
4x10mm
Set screws


14 Assembly of Front Suspension Arms

- 88044 x2
2.0mm

- 88014 x2
3x44mm
Shaft

- 88013 x2
4x73mm
Shaft


12 Assembly of Steering Knuckle

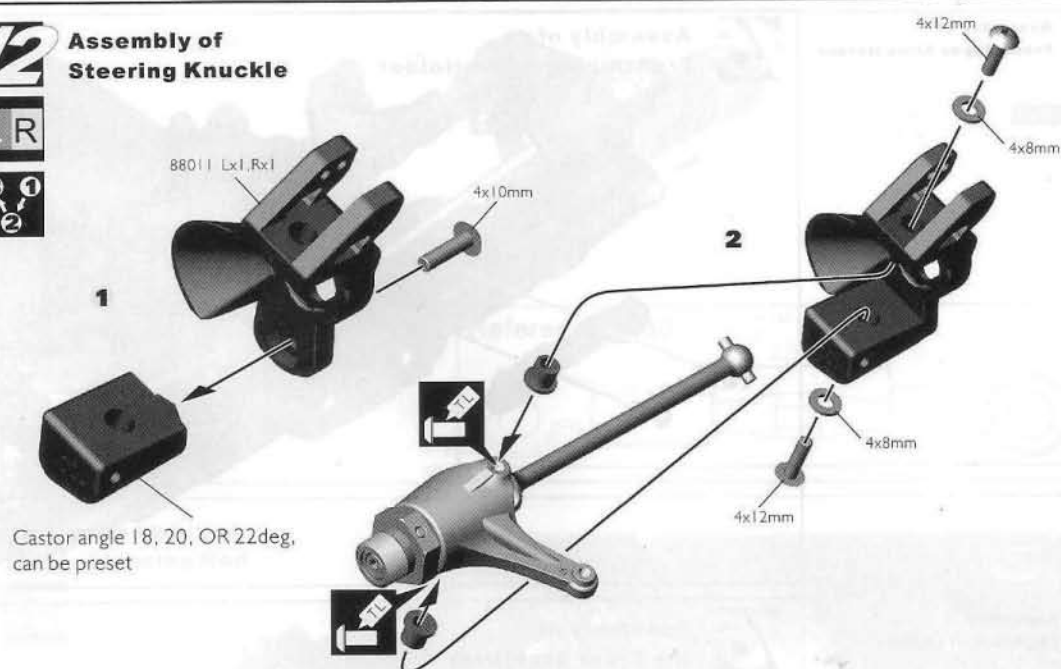



13 Assembly of Front Suspension Arms



Reference P.30

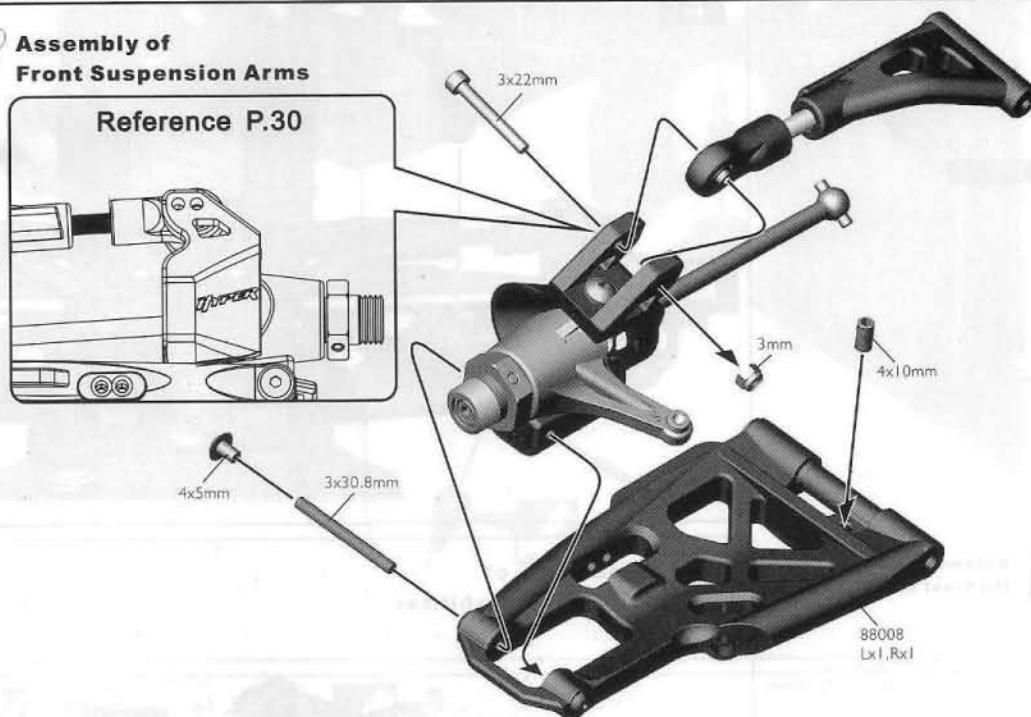

14 Assembly of Front Suspension Arms

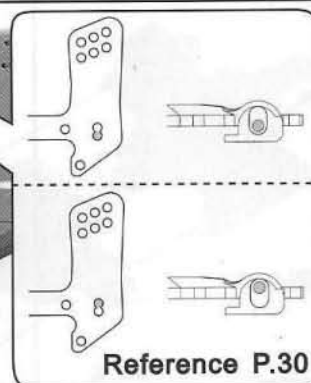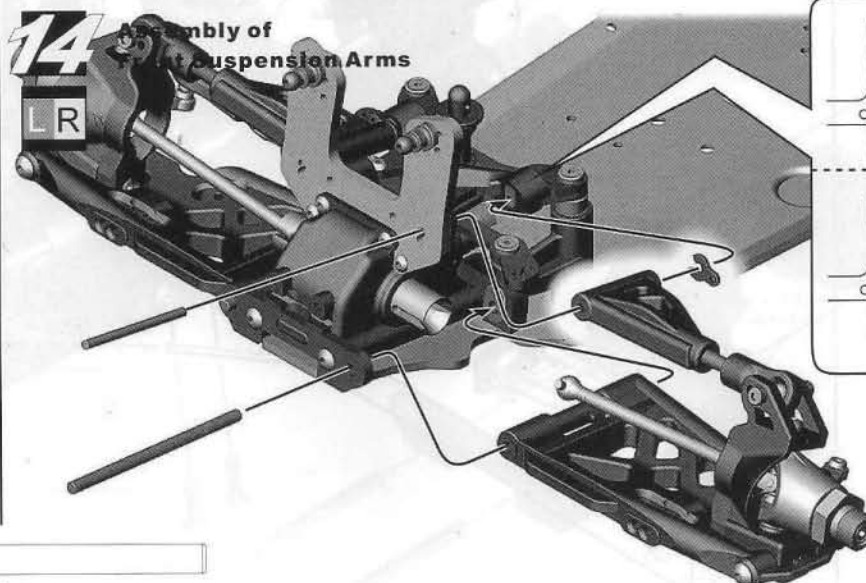

Reference P.30

15 Assembly of Front Upper Arms Holder



 
33315 x2
3x15mm
screws

15 Assembly of Front Upper Arms Holder

3x15mm

88006 x1
Pin holder

16 Assembly of the Front Stabilizer



88033 x2
Ball end



32316 x2
3x16mm
Cap screws



88039 x2
Pivot ball Collar



87016 x2
Steel ball

16 Assembly of the Front Stabilizer



2

1

X2



3x16mm

17 Assembly of the Front Stabilizer



88001 x1
Anti-roll bar holder



38303 x2
3x3mm
Set screw



88041 x2
3x4mm
Set screws



33310 x2
3x10mm
screws



31416T x2
4x16mm
F/H screws

17 Assembly of the Front Stabilizer

88003 x1
front bumper

3x10mm

3x4mm

88042 x1
2.5mm
Front stabilizer

 
3x3mm

4x16mm

18 Assembly of Steering Rod



88078 x2
4x45mm
Turnbuckle




88022 x2
Steering ball end




88022 x2
Steering ball end

18 Assembly of Steering Rod

X2

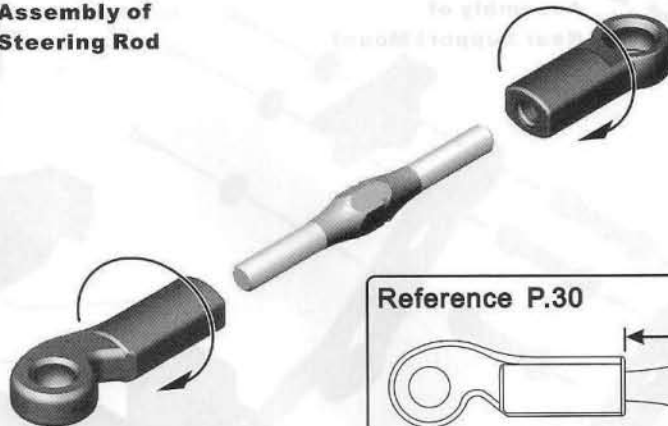

Reference P.30

 

19 Assembly of Steering Rod




88012 x4
6.8mm
Ball



39008 x2
3mm
Nylon nut

19 Assembly of Steering Rod

LR

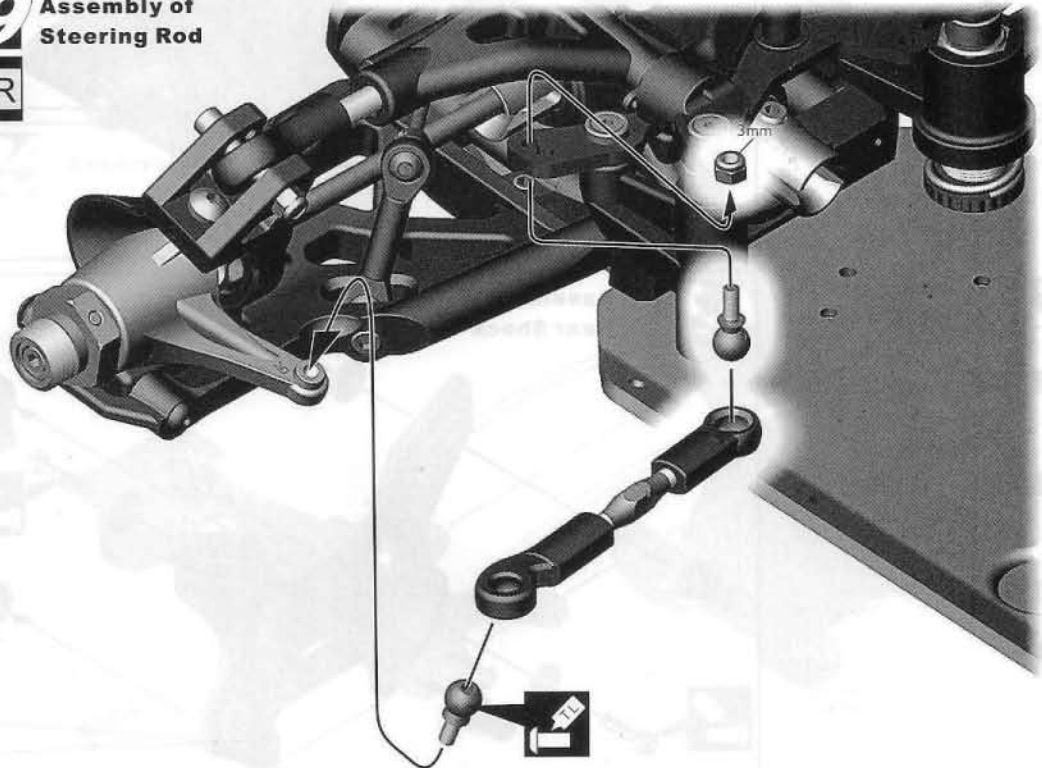


20 Assembly of Rear Gear Box




33315 x2
3x15mm
screws



 
87021 x1
5x4mm
Set screw



88117 x1
Drive pinion gear

 

87021 x1
Center joint cup

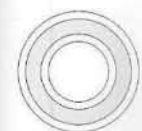


84076 x2
8x16mm
Ball bearing



88002 x2
4x47mm
Tapping screws

20 Assembly of Rear Gear Box

3 1 2

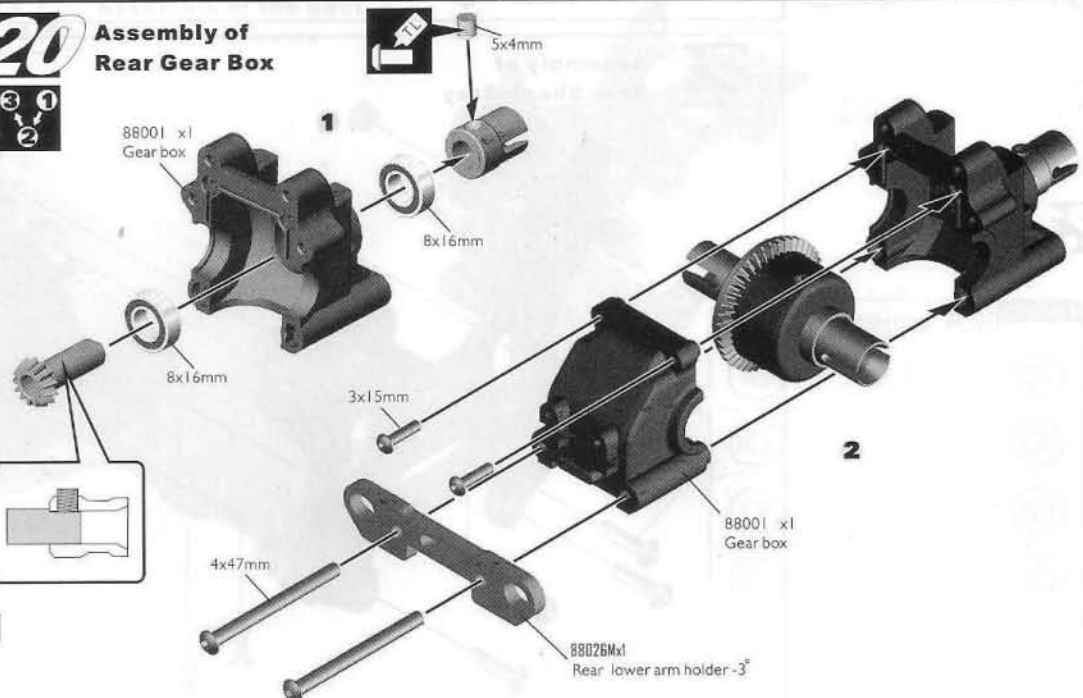


21 Assembly of Rear Support Mount



33315 x2
3x15mm
screw

21 Assembly of Rear Support Mount

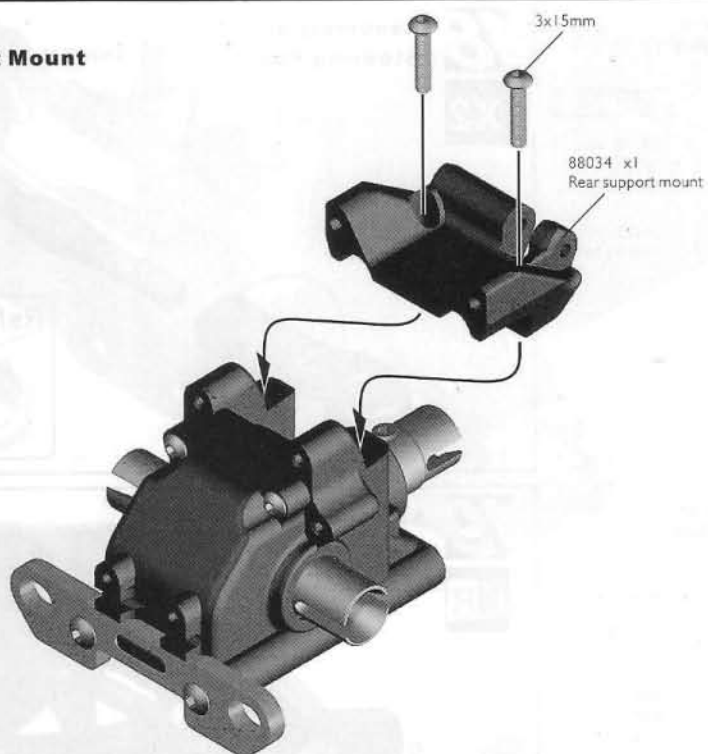

22 Assembly of Rear Shock Stay



32316 x2
3x16mm
Cap screws



32314 x2
3x14mm
Cap screws



33312T x1
3x12mm
Tapping screw



88032 x2
Flange ball




88094x2
Steel shock ball



88115 x4
Alum collar

22 Assembly of Rear Shock Stay

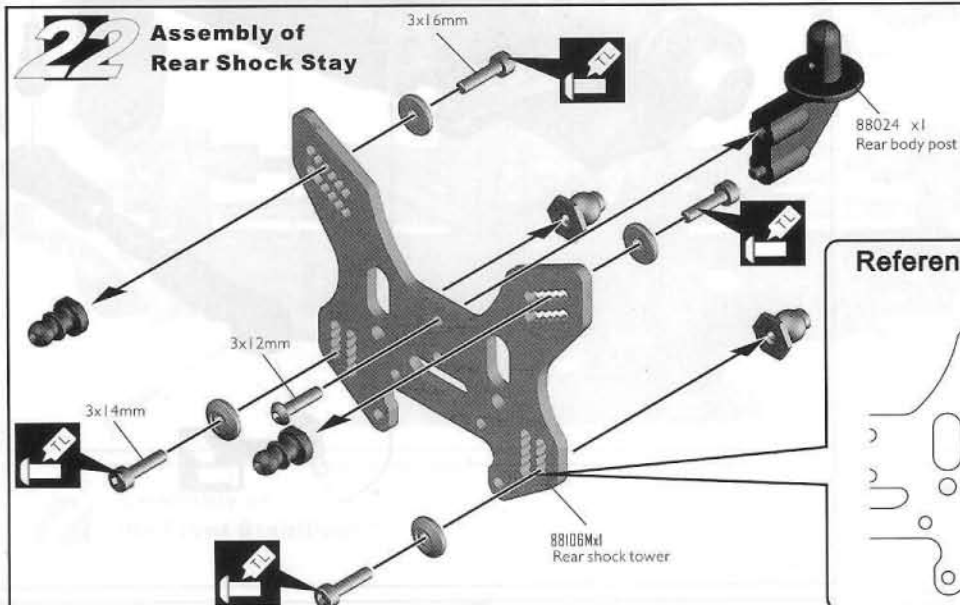


23 Assembly of Rear Shock Stay


23 Assembly of Rear Shock Stay



33315 x4
3x15mm
Tapping screws

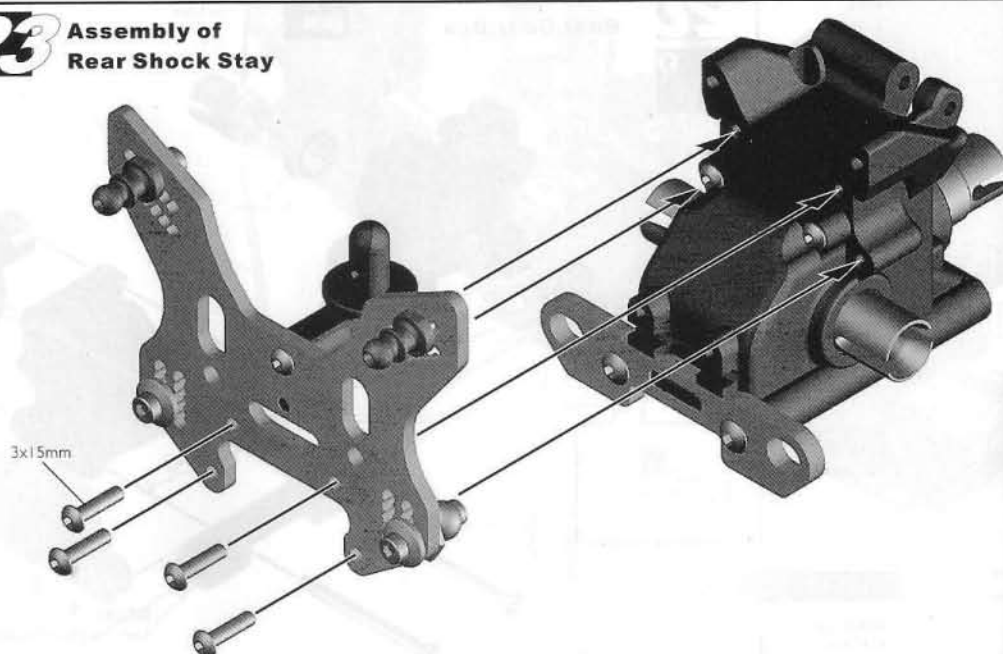

24 Assembly of Wing Stay

 

87046 x3
wing support



87046 x6
Plastic Washer




87046 x2
3x10mm
Tapping screw



87046 x4
3x12mm
Tapping screw

24 Assembly of Wing Stay

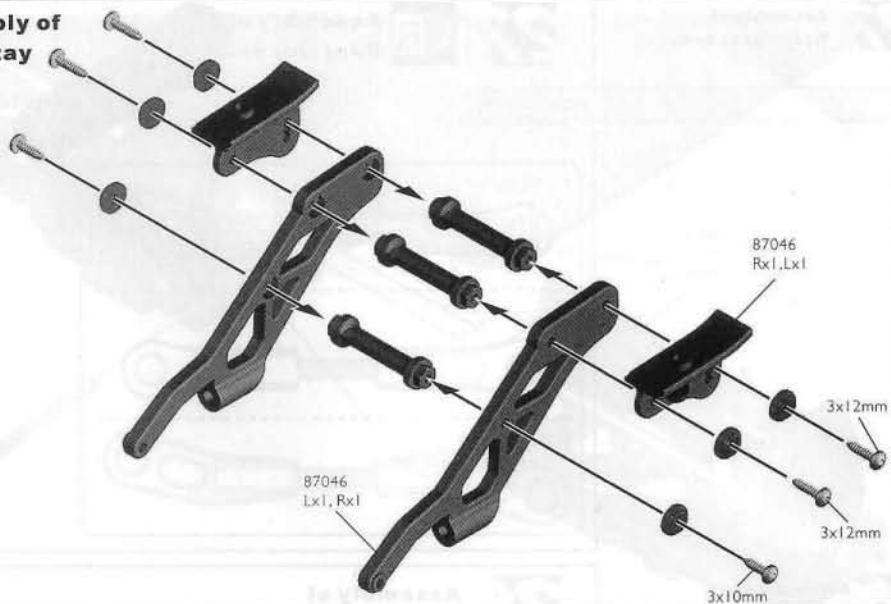


25 Assembly of Wing Stay




35424T x2
4x24mm
Tapping screw

25 Assembly of Wing Stay

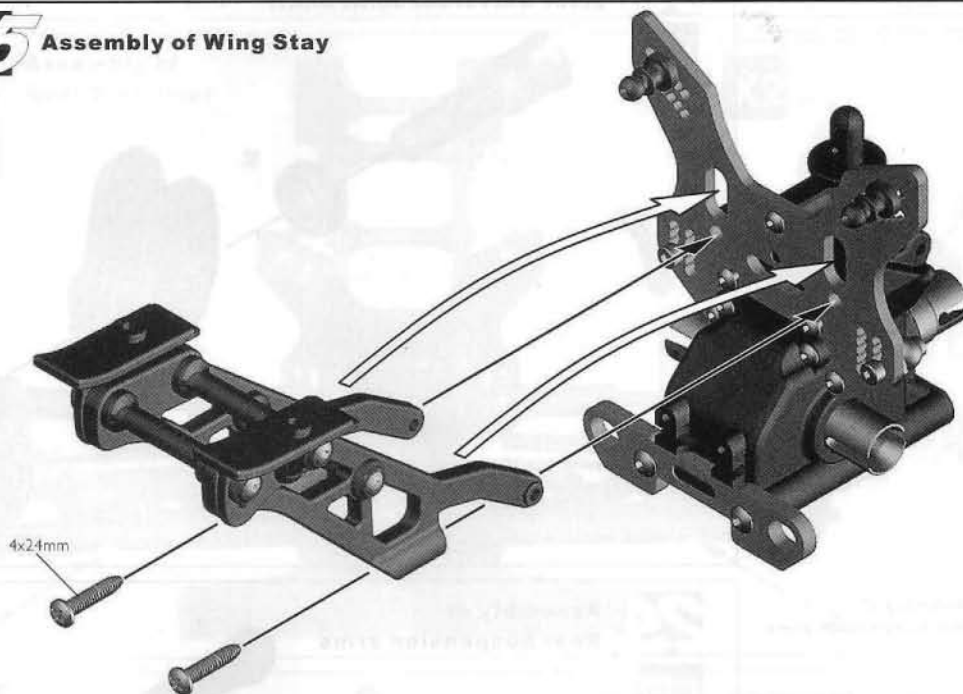

 26 Assembly of the Rear Diff. onto Chassis




31416T x2
4x16mm
TP/FH screws




88027 x2
anti squat bushing

26 Assembly of the Rear Diff. onto Chassis

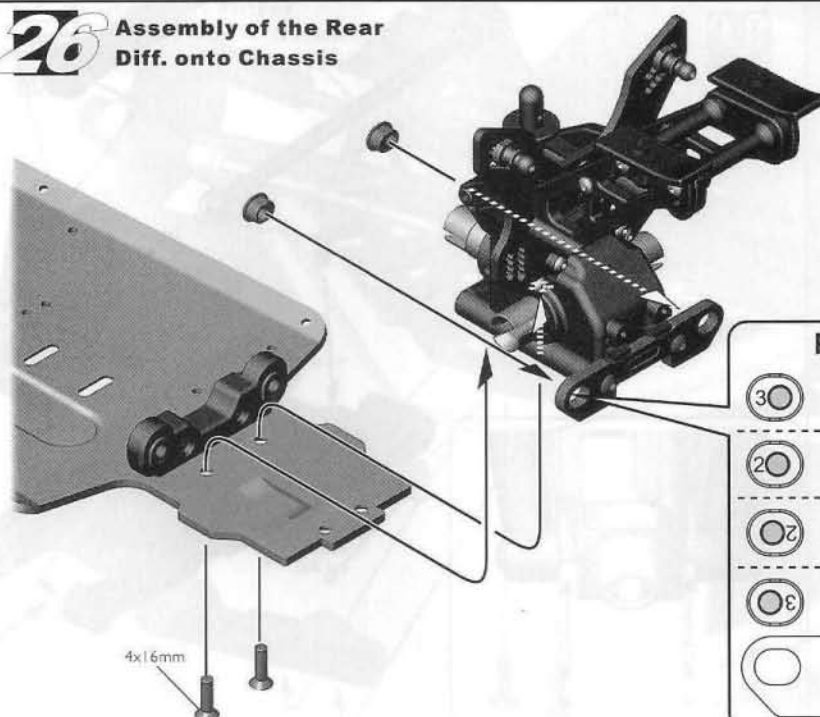

Reference P.30

30	2.5°	08
20	3°	02
02	3.5°	20
08	4°	30

 

27 Assembly of Rear Upper Arms



 
88113 x2
5x60mm
Set screw



88031 x2
7.8mm
Ball

27 LR Assembly of Rear Upper Arms



Standard



Option



 Option

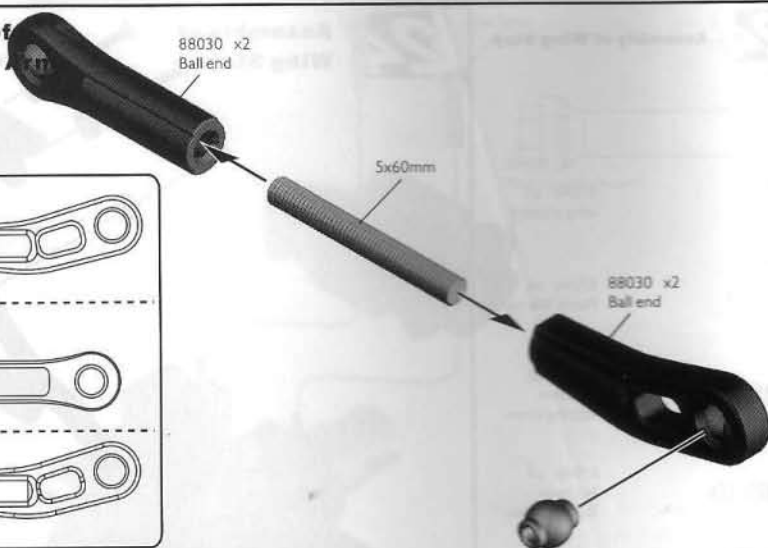

28 Assembly of Rear Universal Joint Shaft




38505 x2
5x5mm
Set screw



84076 x4
8x16mm
Ball bearing




87027 x2
2.5x16.8mm
Shaft

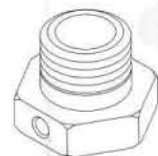

87027 x2
Wheel hub set

28 LR Assembly of Rear Universal Joint Shaft

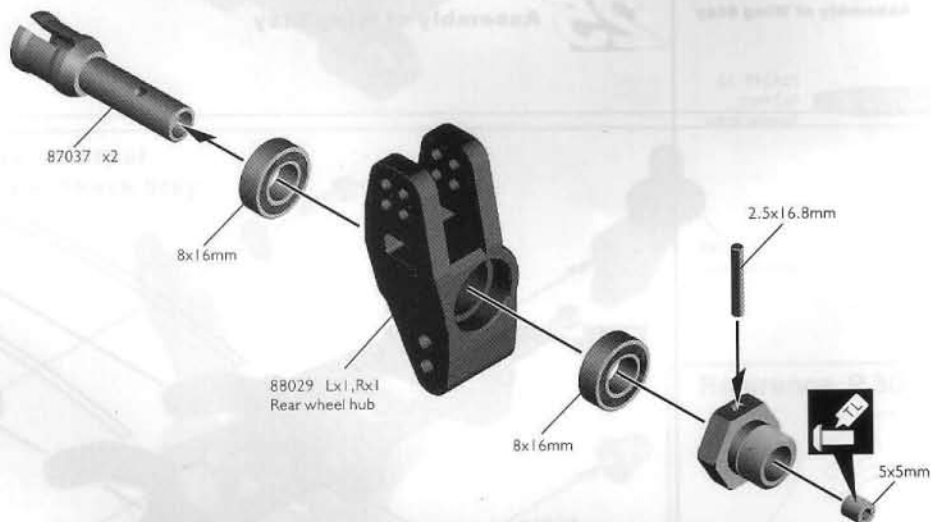


29 Assembly of Rear Suspension arms



33405 x2
4x5mm
screw



 38410 x2
4x10mm
Set screw



32325 x2
3x25mm
Cap screws



88044 x4
2.5mm





88014 x2
3x44mm
Shaft




39008 x2
3mm
Nylon nut

29 LR Assembly of Rear Suspension arms

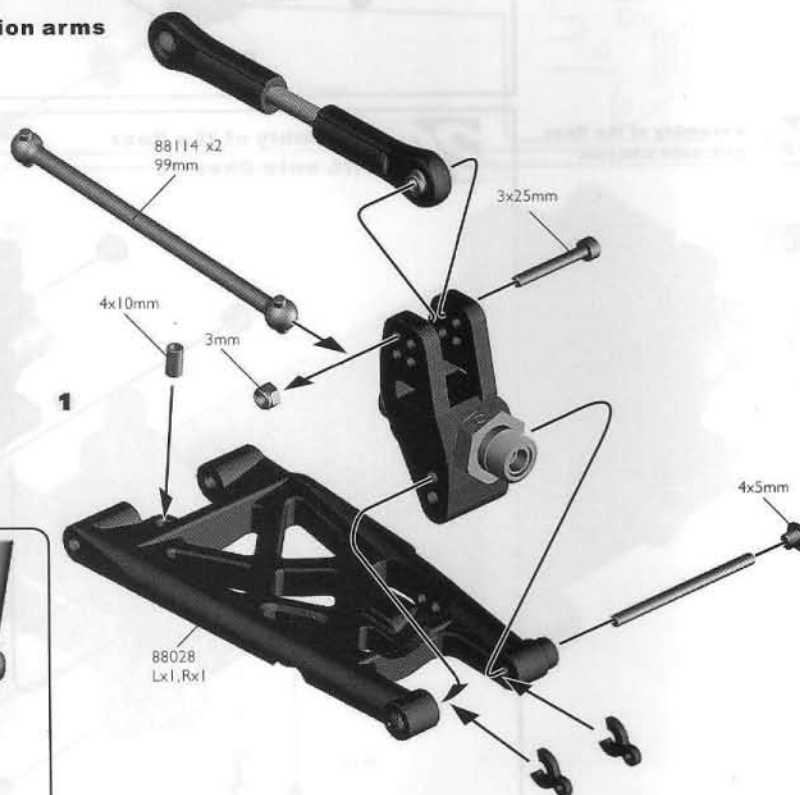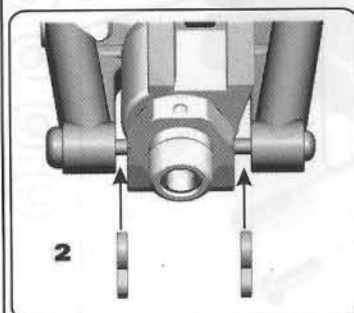

30 Assembly of Rear Suspension arms

88013 x2
4x73mm
Shaft

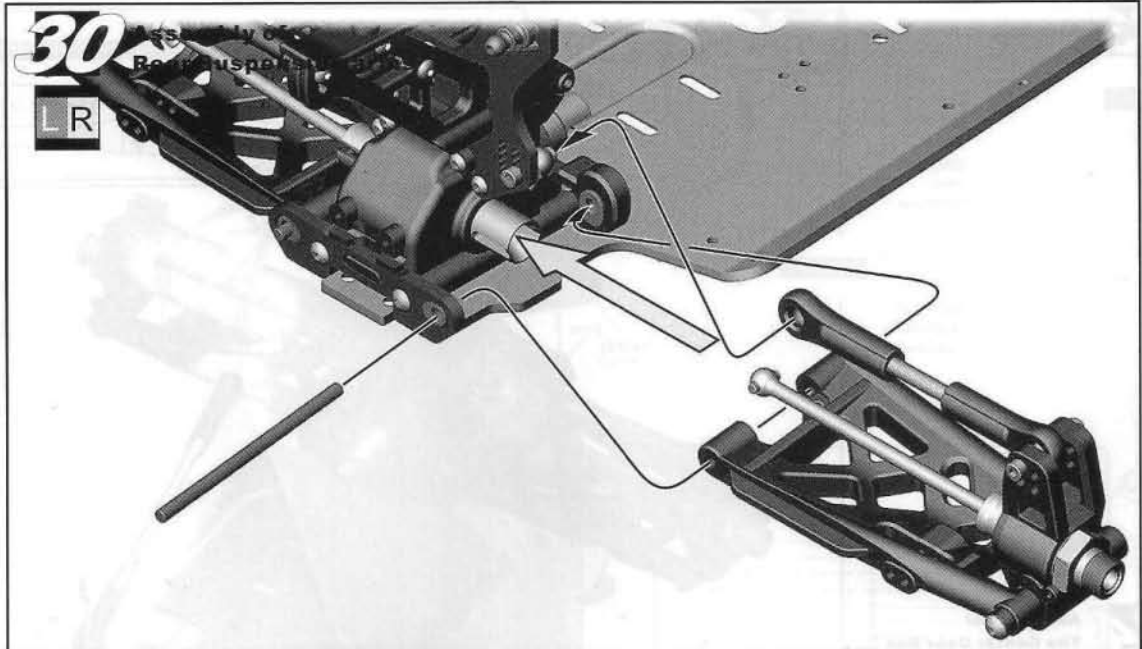

31 Assembly of Rear Stabilizer


88033 x2
Ball end

88039 x2
Pivot ball Collar

87016 x2
Steel ball

32320 x2
3x20mm
Cap screw

31 Assembly of Rear Stabilizer

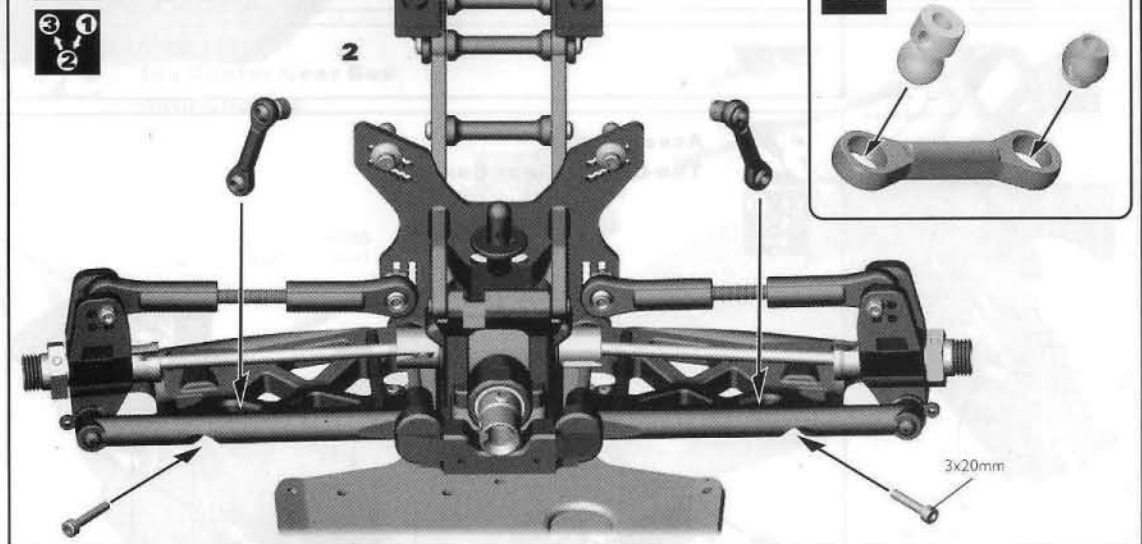

32 Assembly of Rear Stabilizer

38303 x2
3x3mm
Set screw


38304 x2
3x4mm
Set screw

88001 x1
Front suspension holder

33310T x2
3x10mm
Tapping screw

31416T x2
4x16mm
TP/FH screw

32 Assembly of Rear Stabilizer

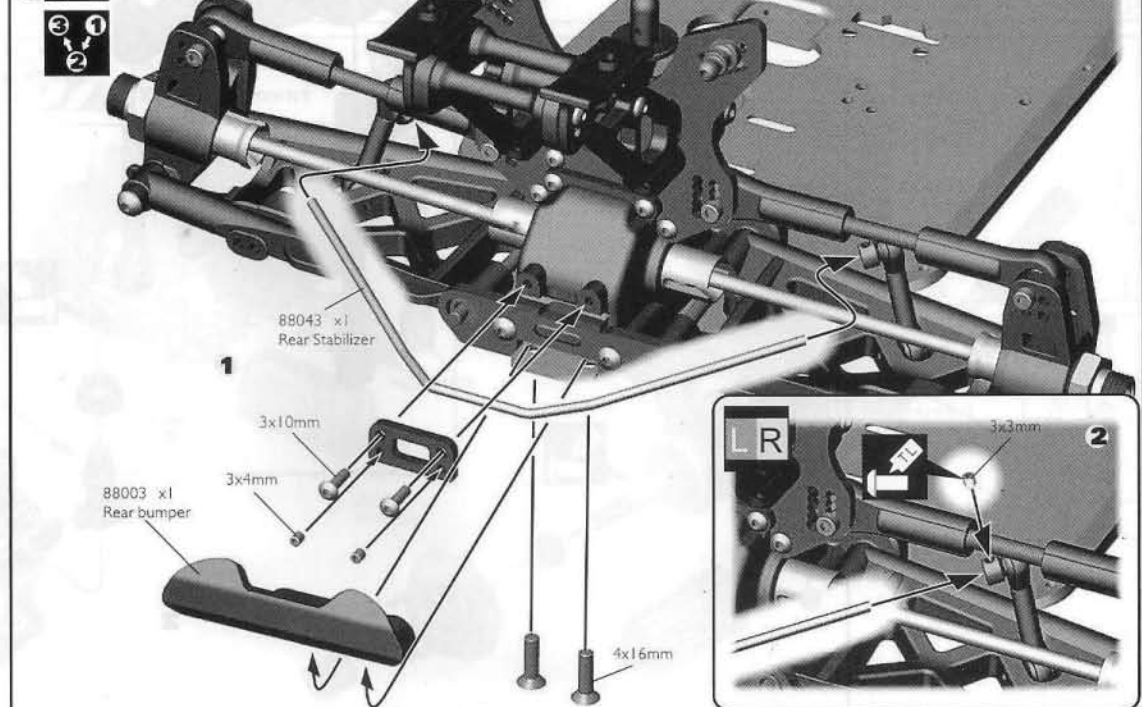

33 Assembly of Rear Brace



31310 x1
3x10mm
F/H screw



88034 x1
3mm
Nylon nut



88034 x1
3x50mm
Cap screws

 


88107 x1
Ball



88107 x1
Flange ball

34 Assembly of The Center Gear Box




88046 x2
Consolidate plate




87052 x4
Hex head screw



88087 x4
Brake caliper

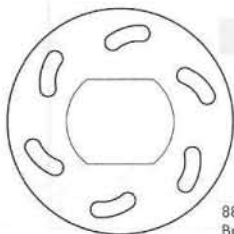

88048 x2
Brake disc

 

88045 x4
center diff. Mount post



 
87054 x1
3x3mm
Set screw




88046 x2
5x8mm



87054 x1
Brake rod




87054 x1
Brake cam-short

 


87054 x1
Brake cam-long

33 Assembly of Rear Brace

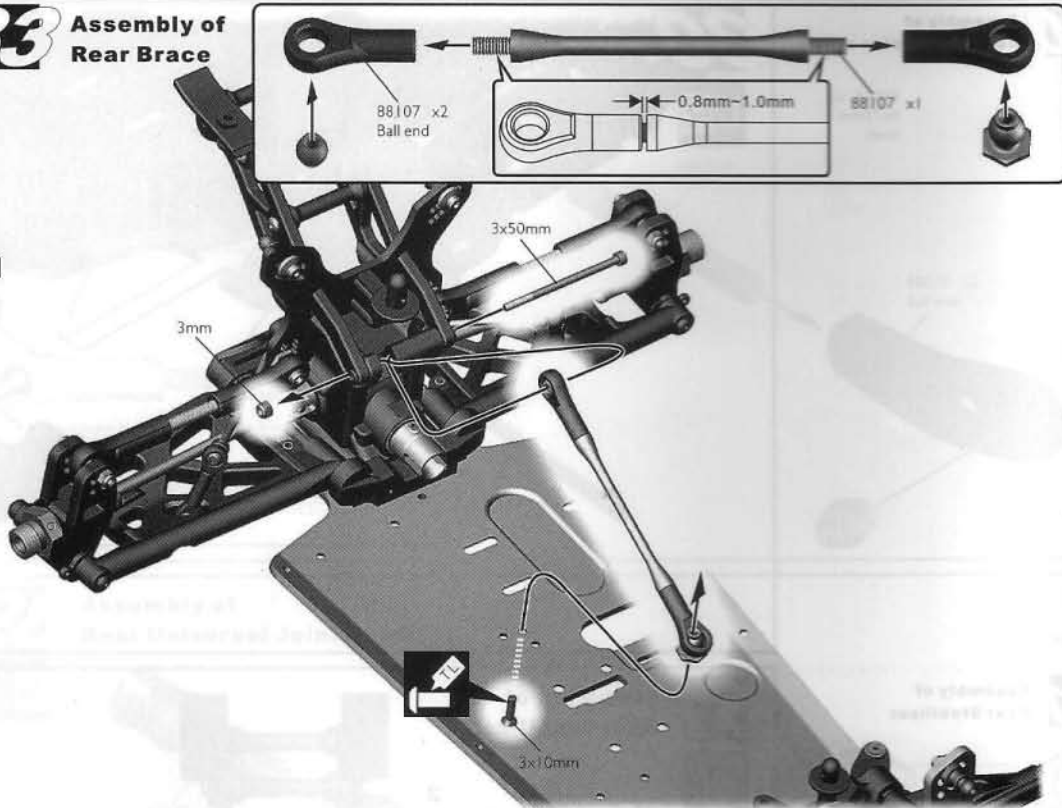

34 Assembly of The Center Gear Box

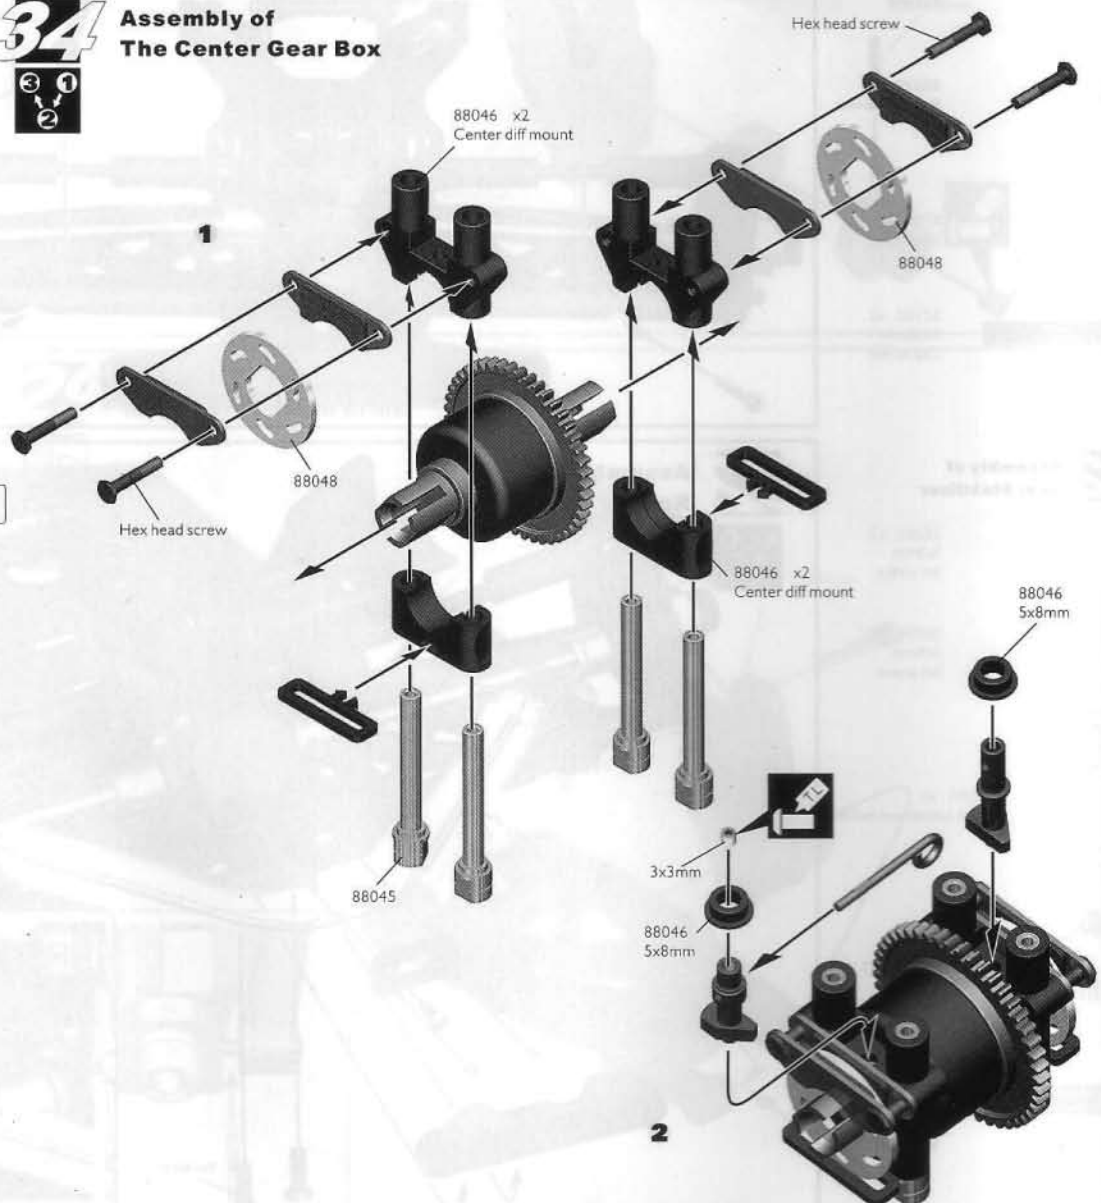


35 Assembly of Center Diff. Plate

87054 x1
3x3mm
Set screw

87054 x1
Brake rod

33310 x4
3x10mm
screws


35 Assembly of Center Diff. Plate

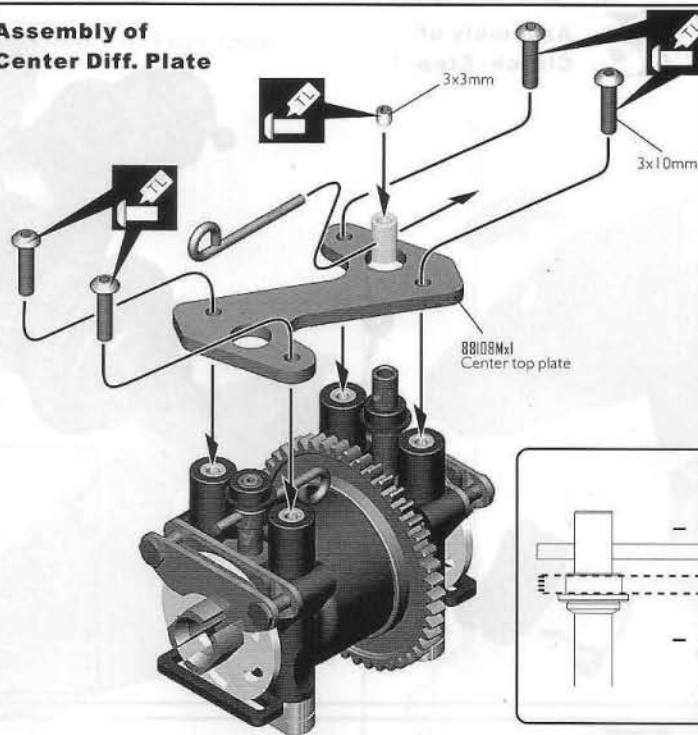

36 Assembly of the Center Gear Box onto Chassis

31408 x4
4x8mm
F/H screw

36 Assembly of the Center Gear Box onto Chassis

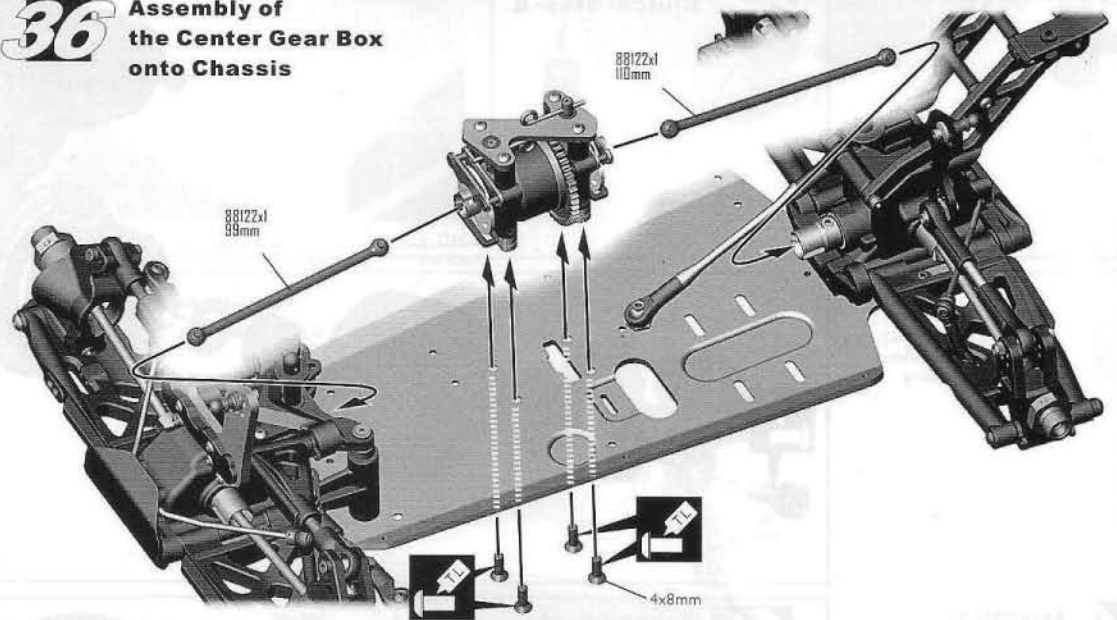

37 Assembly of Engine mount

87079 x4
3x14mm
Cap screws

224044 x1
Pilot nut

88061 x1
Collar


87079 x4
3mm
Nylon nut

87079 x4
3.2x5x0.8mm
Washer

87079 x2
Engine mounst gasket

87079 x2
Engine mount

37 Assembly of Engine mount

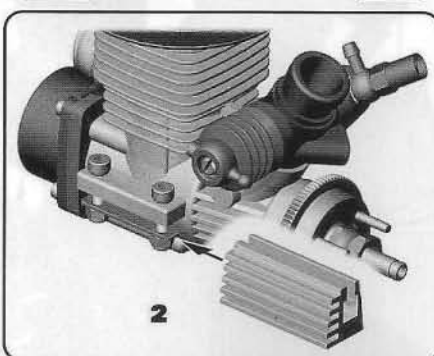


3 1
2

88061 x1
Flywheel

38 Assembly of Clutch- Step- I




 84052 x3
Clutch shoe



84053 x3
Clutch spring

38 Assembly of Clutch- Step- I

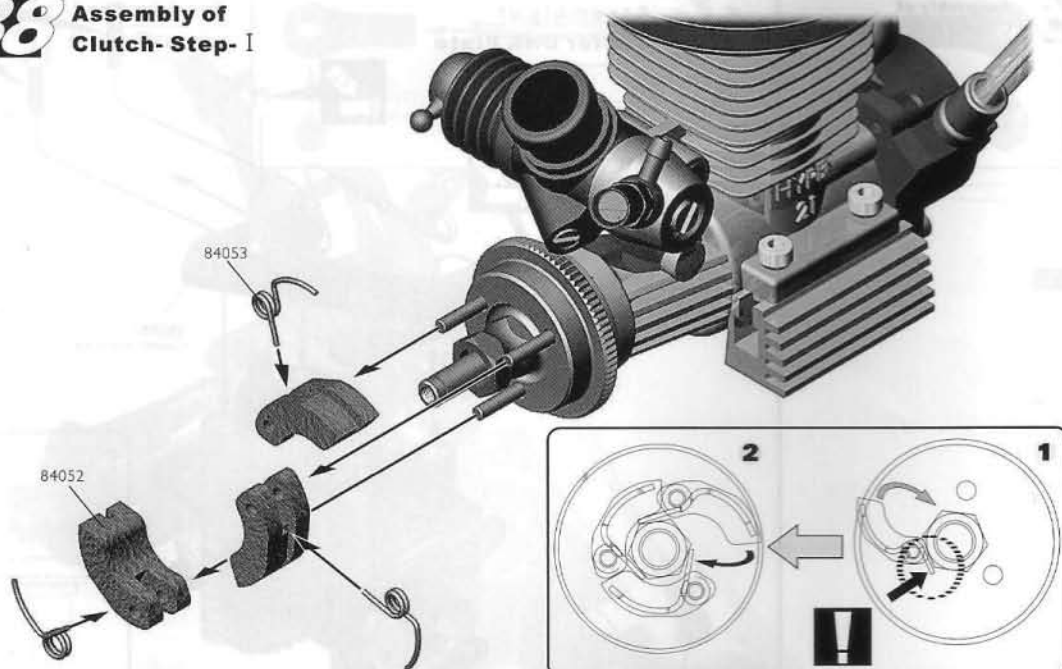

39 Assembly of Clutch- Step- II



32308 x1
3x8mm
Cap screws



84187 x1
3.1x6mm
Washer




84187 x2
5x8mm
Washer



84077 x2
5x10x4mm
Bearing

39 Assembly of Clutch- Step- II

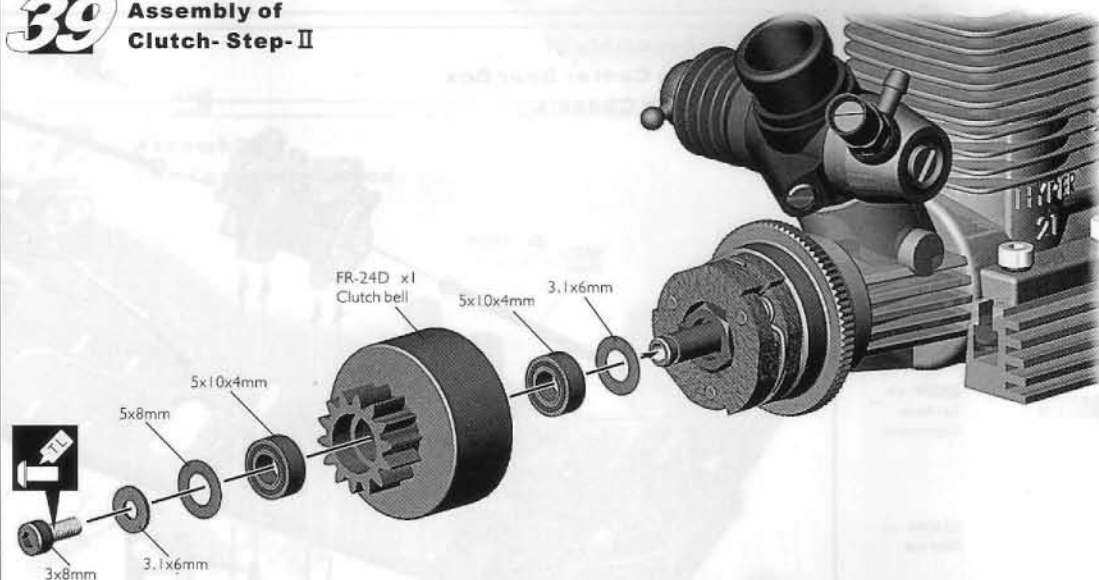


40 Assembly of Engine onto Chassis




88060 x4
4x8mm
Engine screw

40 Assembly of Engine onto Chassis

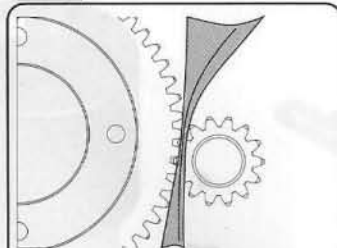

**The fitting is in good position
If there is a clear gear-teething
mark on the paper after sliding out.*

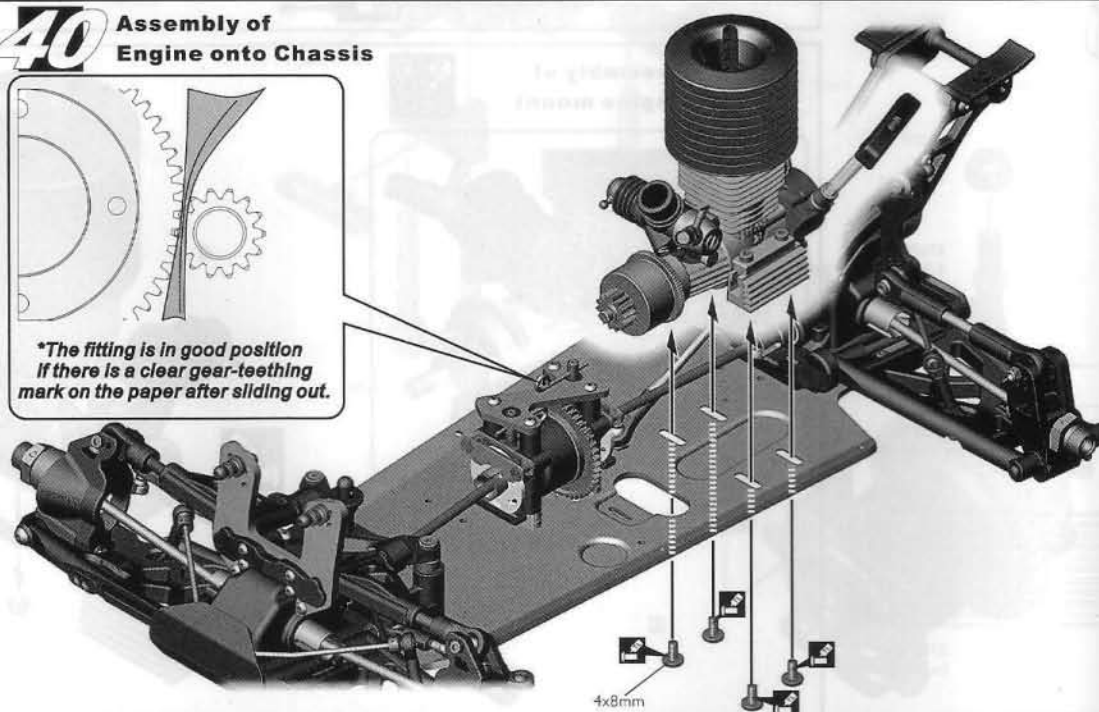

41 Assembly of Fuel Tank



31312T x1
3x12mm
TP/FH screw



 
33310T x1
3x10mm
Tapping screw



88049 x2
3x12mm
Tapping screw



88050 x1
Fuel filter holder



88049 x2
Fuel tank post





88049 x2
2.8x1.9mm
O-ring

42 Assembly of Fuel Tank onto Chassis




31310T x2
3x10mm
TP/FH screw

41 Assembly of Fuel Tank

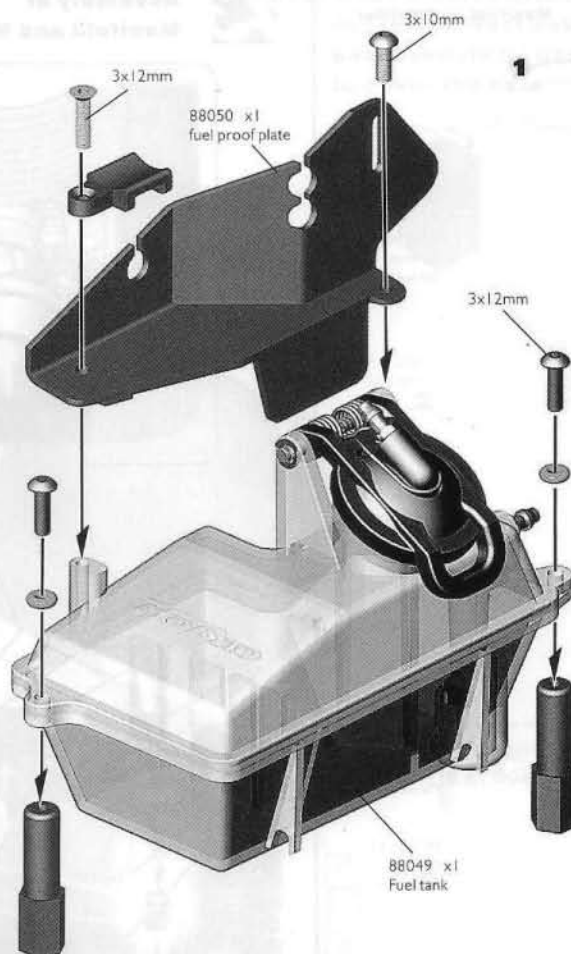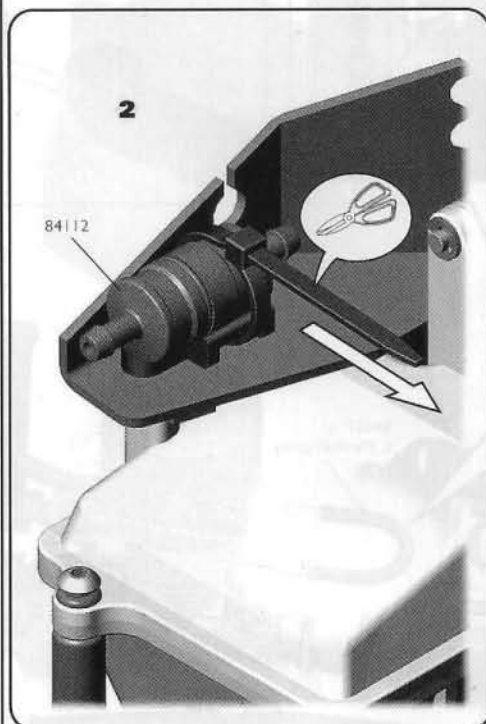

42 Assembly of Fuel Tank onto Chassis

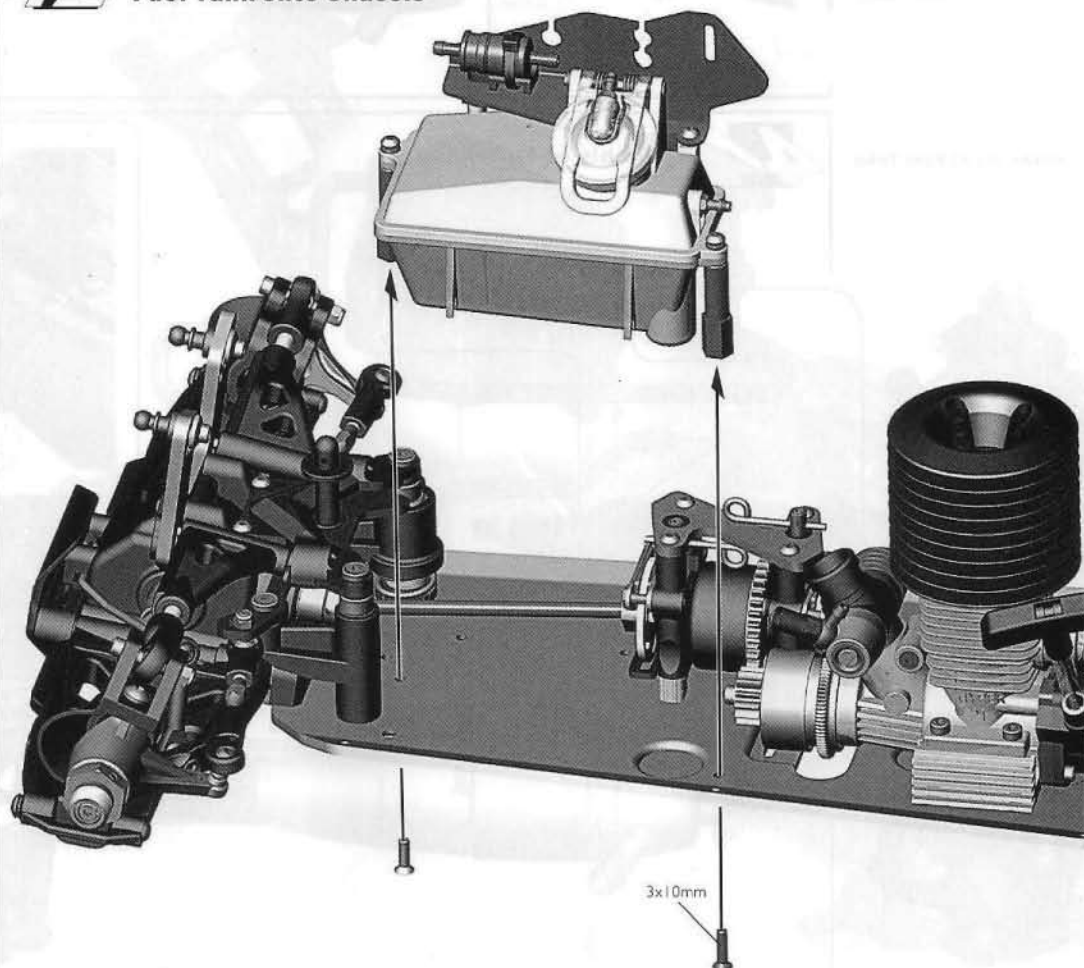

43 Assembly of Manifold and Muffler



84067 x1
Silicone tube




87082 x1
4x4mm
Set screw



87082 x1
Muffler stay



87082 x1
4x8mm
T/H screw

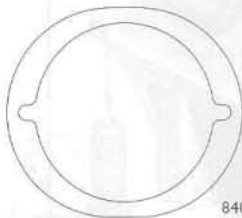

84067 x1
Manifold gasket






38303 x1
3x3mm
Set screw




87082 x1
Muffler holder

43 Assembly of Manifold and Muffler

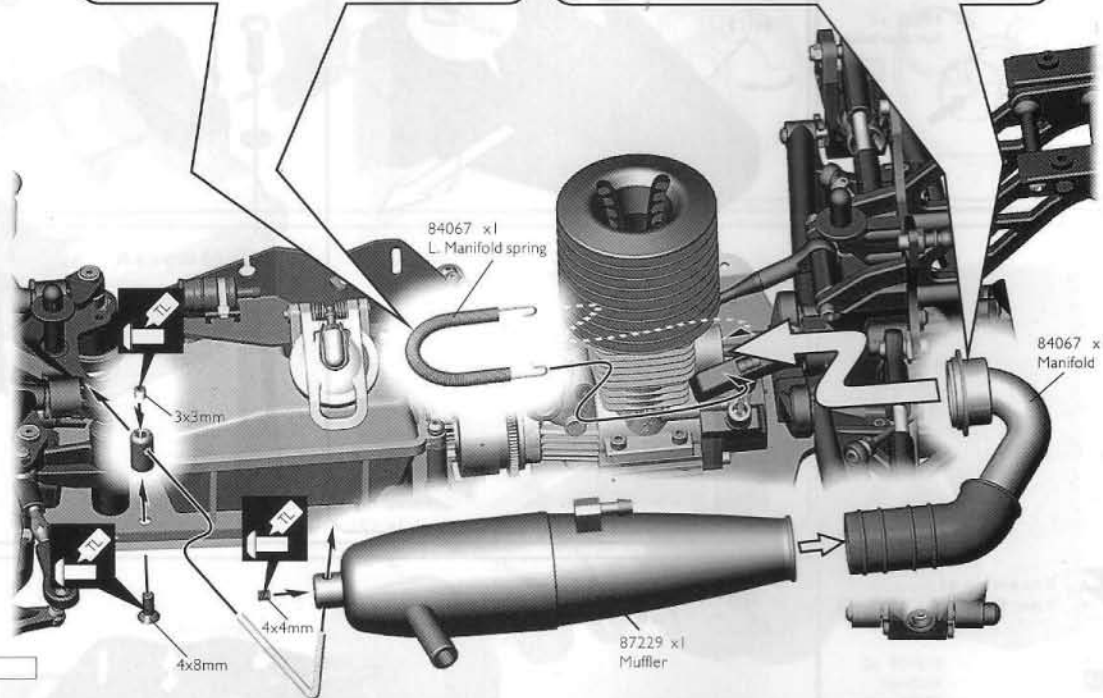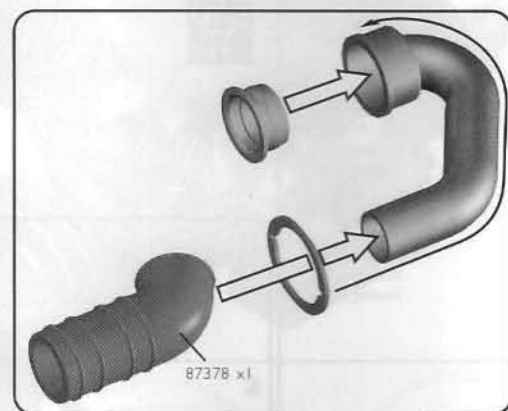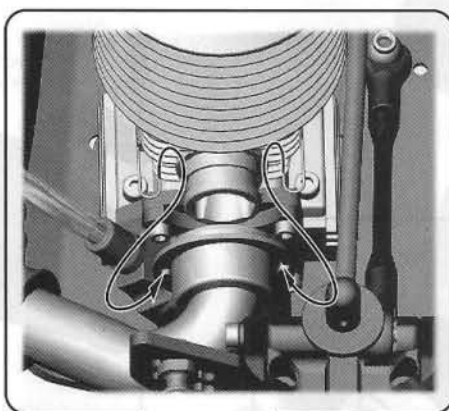


44 Assembly of Fuel Tube


44 Assembly of Fuel Tube

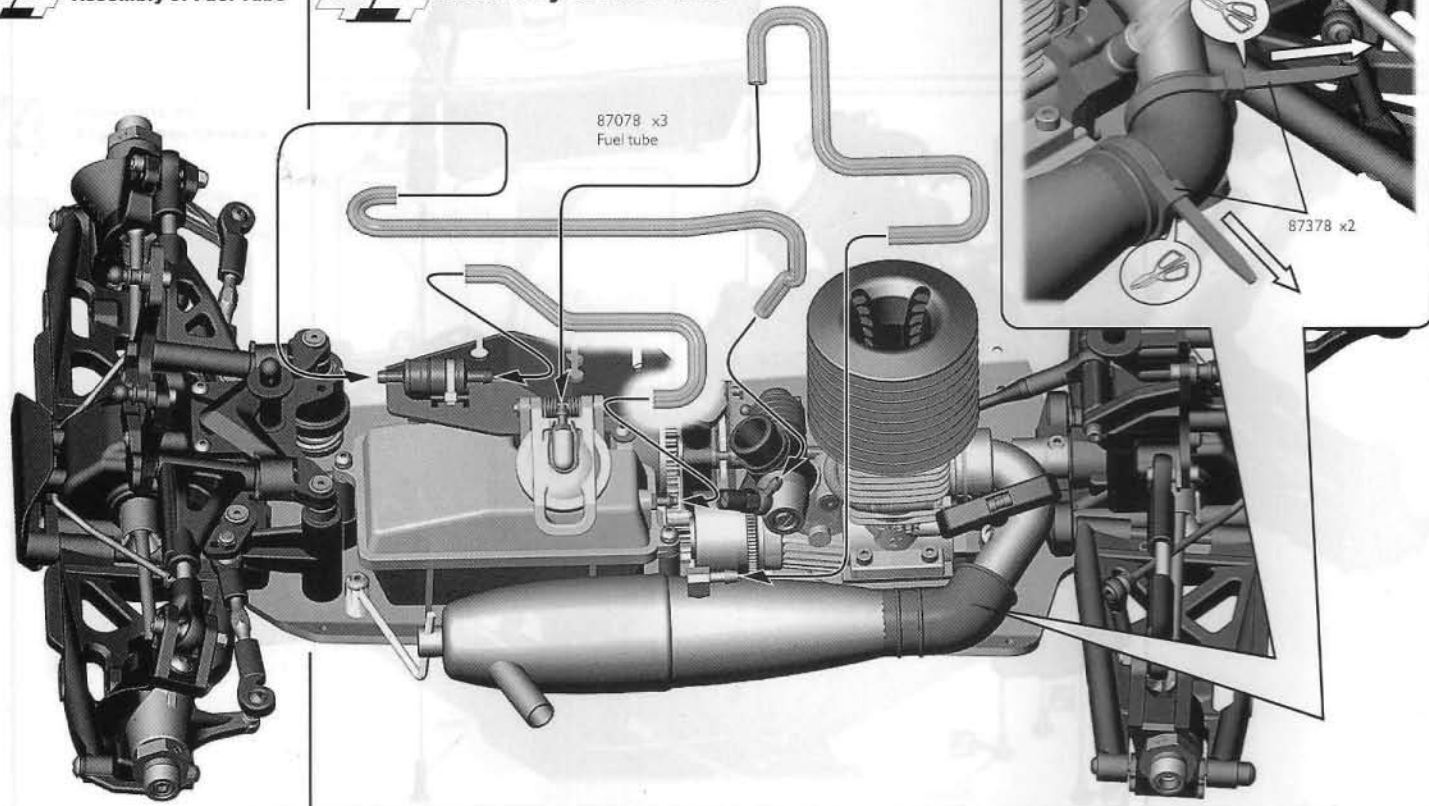

45 Assembly of Receiver Box

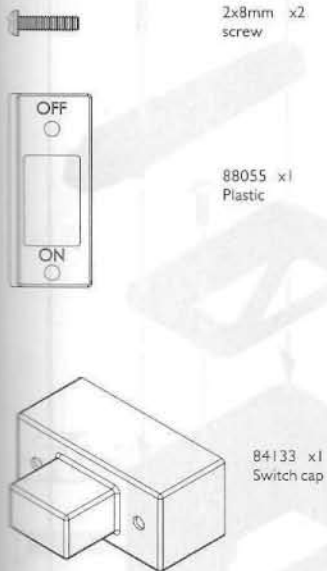


45 Assembly of Receiver Box

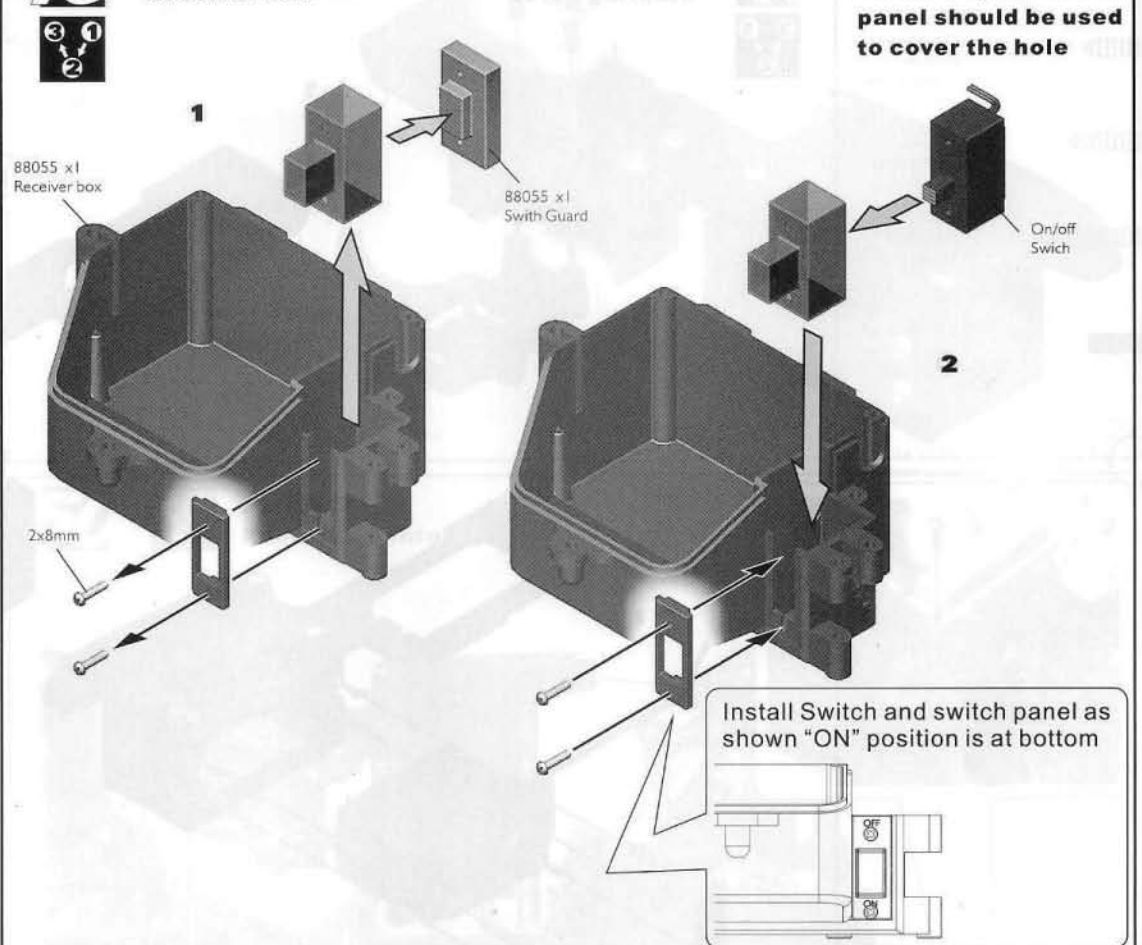


46 Assembly of Receiver Box onto Chassis




46 Assembly of Receiver Box onto Chassis

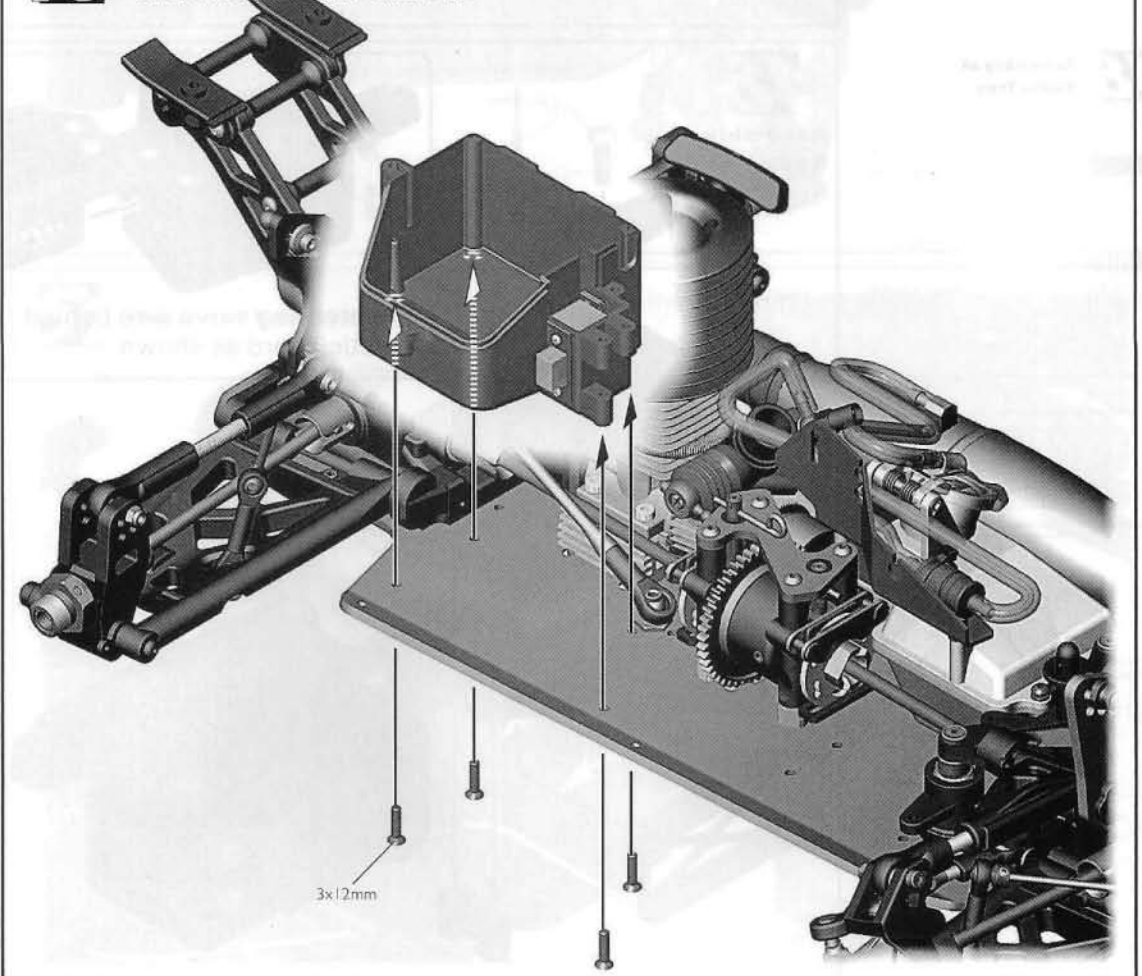


47 Assembly of Steering Servo

 

33310T x6
3x10mm
Tapping screw

 


33312T x1
3x12mm
Tapping screw

 

33315T x1
3x15mm
Tapping screw



 2.8x10mm x1
Tapping screw




88057 x1
Servo horn


47 Assembly of Steering Servo



1

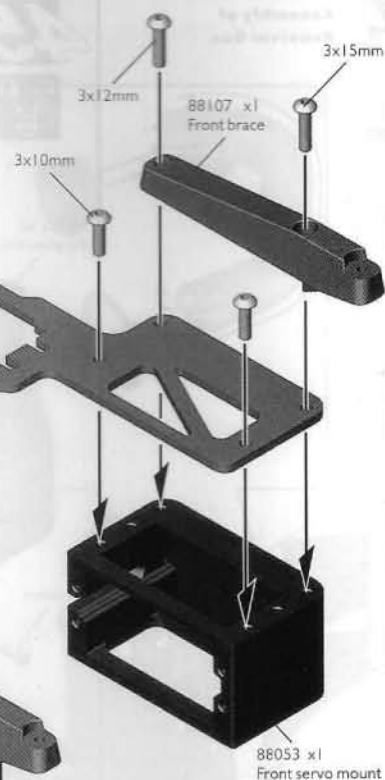


2

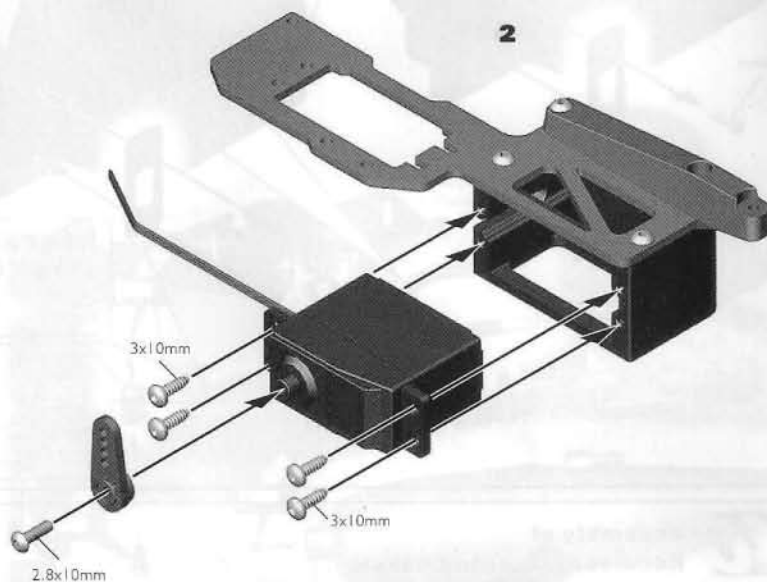


48 Assembly of Radio Tray



 2.8x10mm x1
Tapping screw




33310T x2
3x10mm
Tapping screw

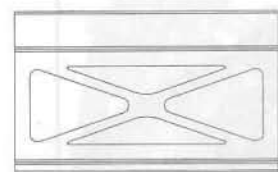

88052 x1
Servo wire holder




 88053 x1
Servo gasket




88057 x1
Servo horn

48 Assembly of Radio Tray


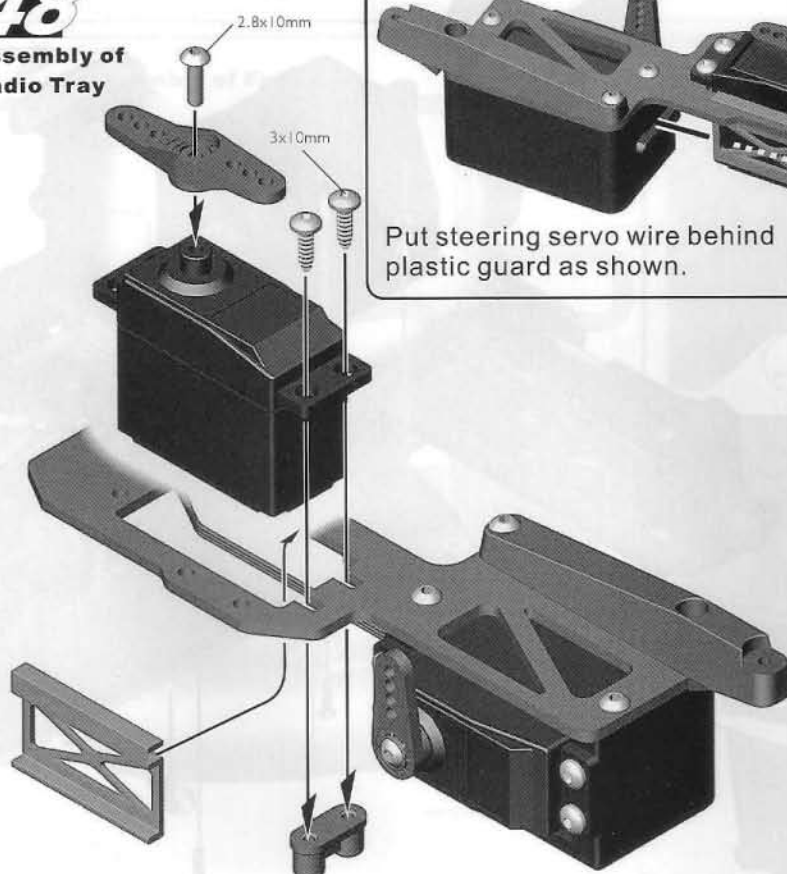


Put steering servo wire behind plastic guard as shown.

U

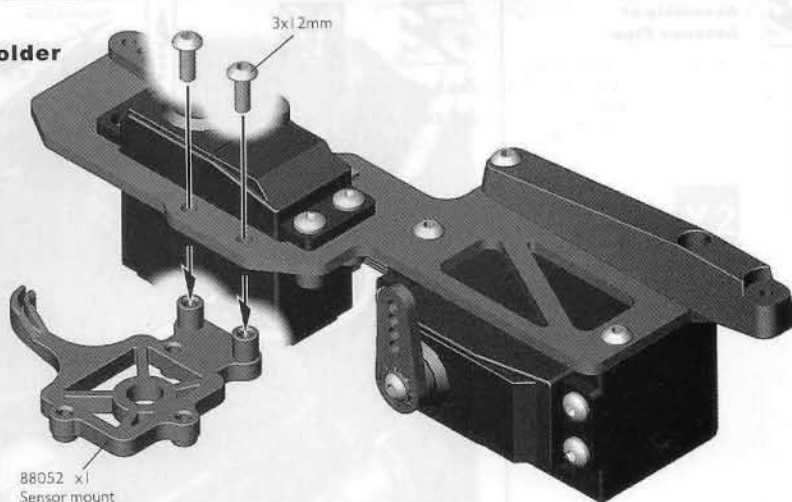


3x12m

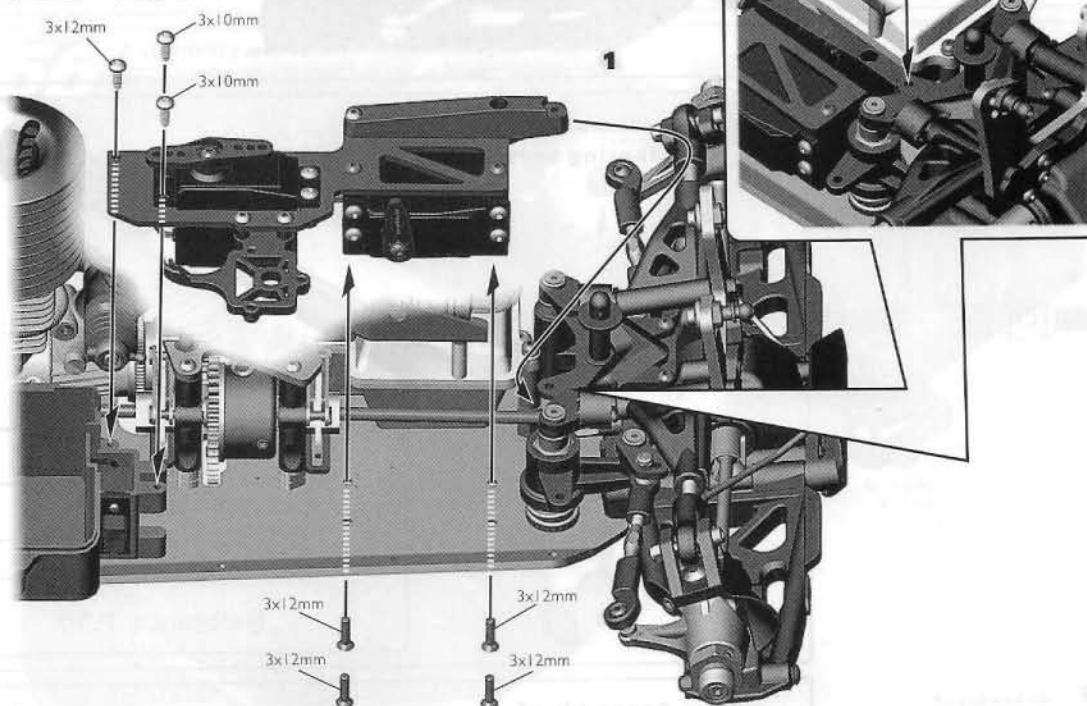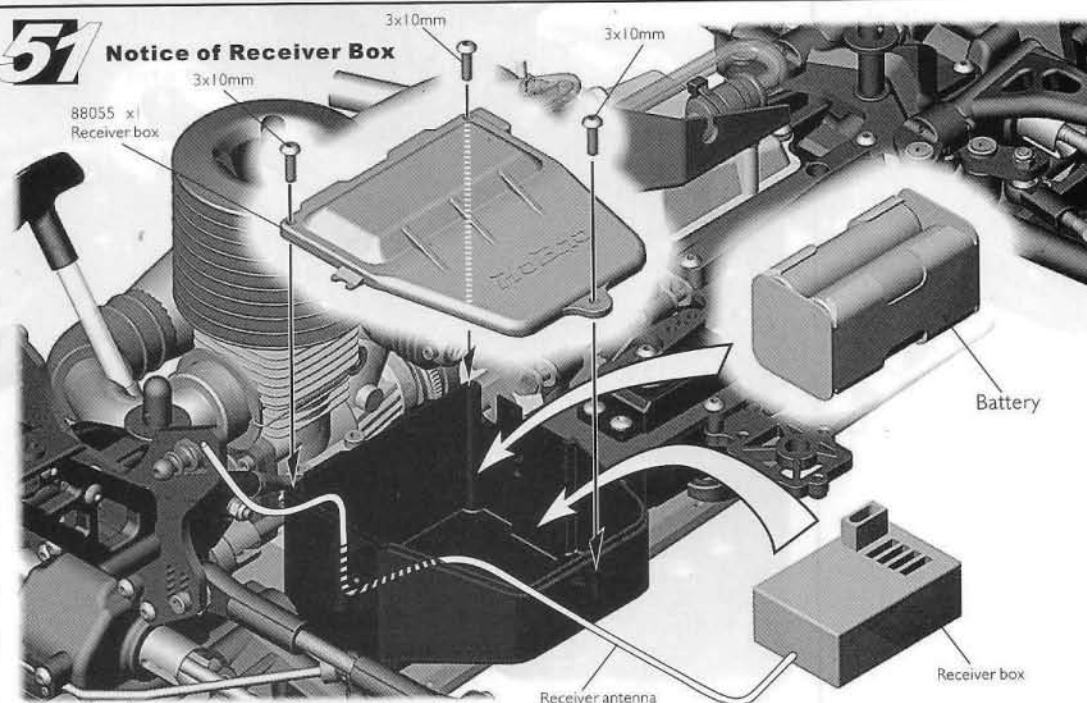
880
Rece

52 Assembly of Antenna Pipe

38303 x1
3x3mm
Set screw

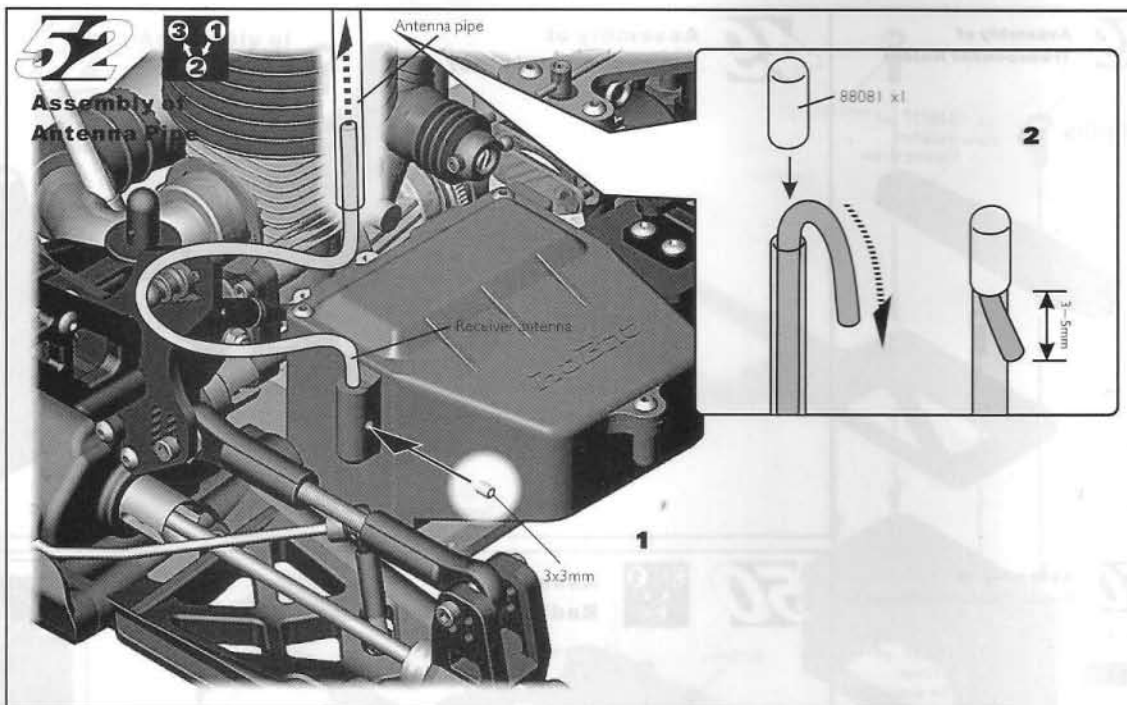

53 Assembly of Steering servo Rod

 

88054 x2
Ball end




88054 x1
4x45mm
Turnbuckle



88054 x2
Ball end


53 Assembly of Steering servo Rod

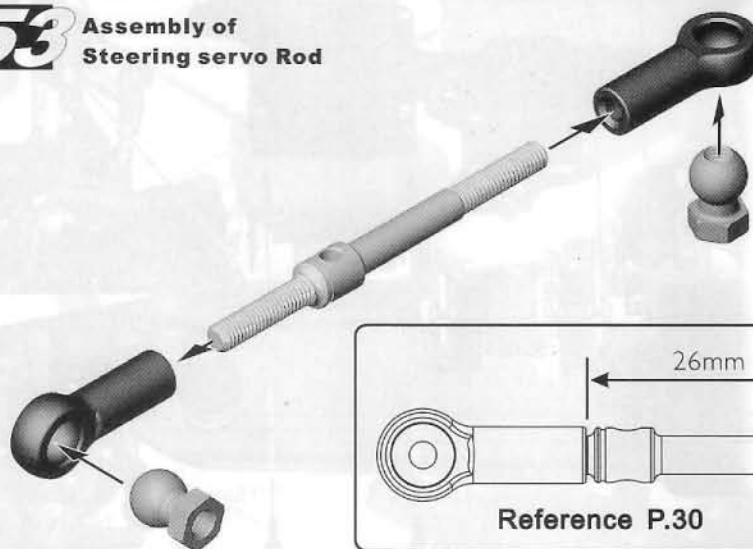

54 Assembly of Steering servo Rod



33310 x2
3x10mm
screw

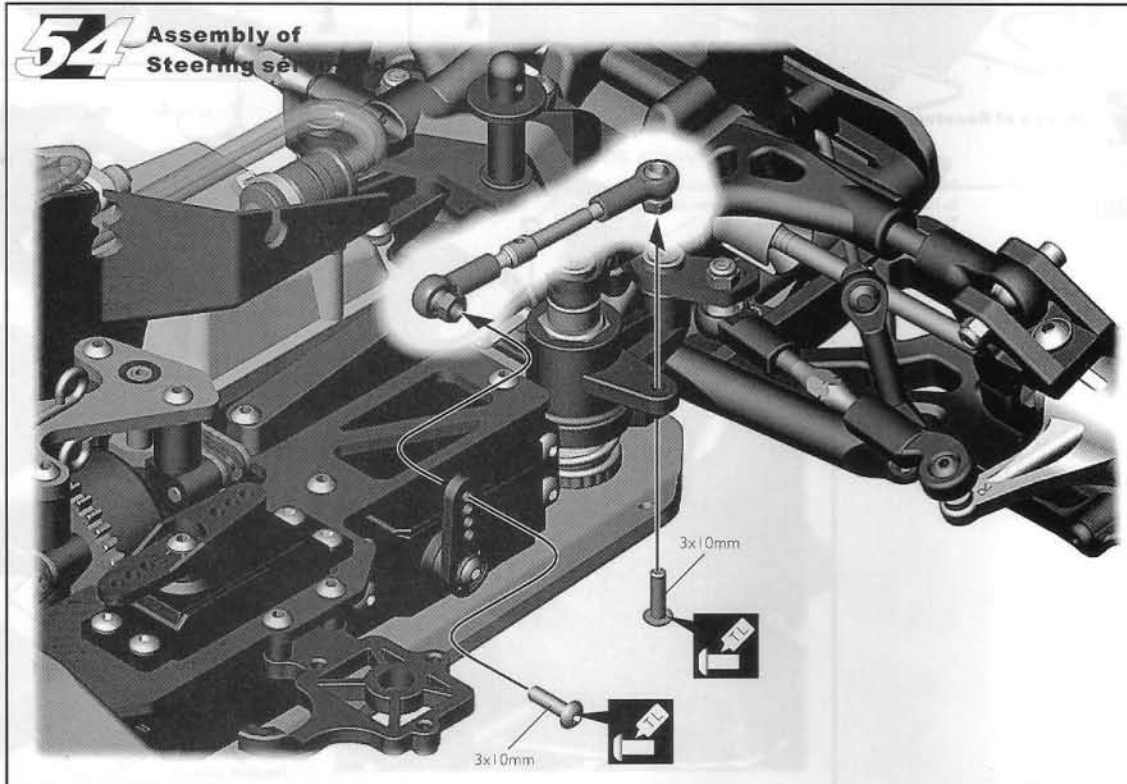


55 Assembly of Throttle Linkage and Brake Linkages

-  88057 x1 Throttle ball end
-  88059 x1 Throttle spring
-  88059 x1 Stopper
-  88059 x2 Brake collar
-  38303 x3 3x3mm Set screw


88059 x3 Throttle rod

55 Assembly of Throttle Linkage and Brake Linkages

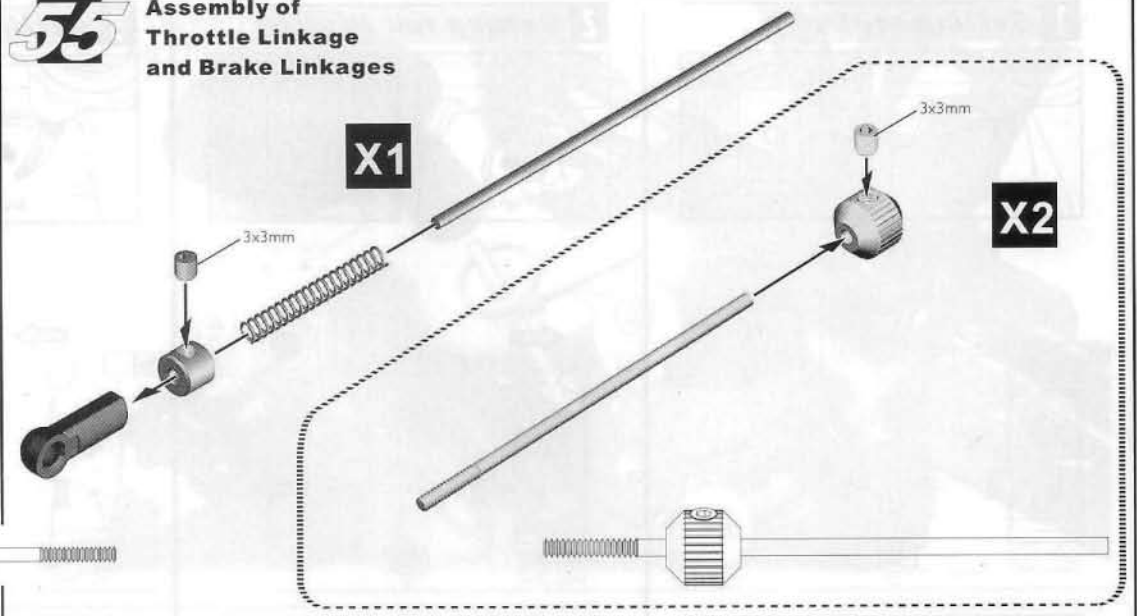


56 Assembly of Throttle Linkage into Lever

-  31314 x1 3x14mm TP/FH screw
-  88059 x1 Collar
-  39008 x1 3mm Nylon nut
-  38303 x1 3x3mm Set screw
-  88059 x1 Stopper


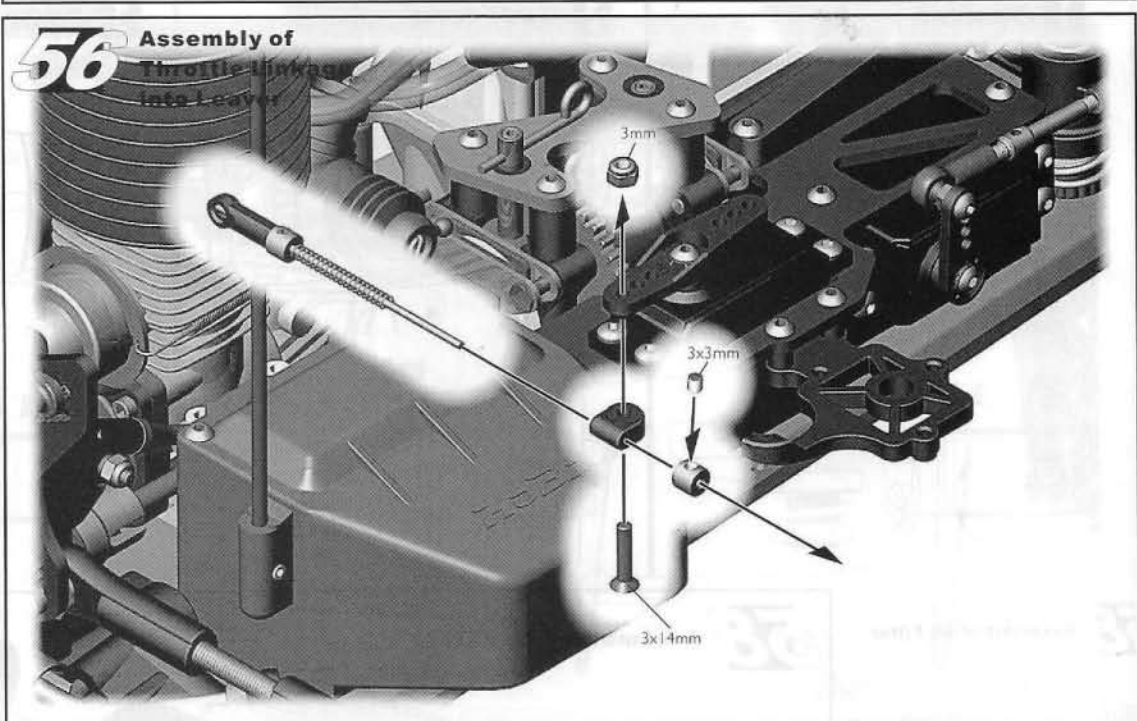


57 Assembly of Brake Linkage into Brake Lever



-  31323 x1 3x23mm TP/FH screw
-  88059 x2 Throttle spring
-  88059 x1 Collar
-  88059 x1 Collar
-  88059 x2 Plastic ball
-  88059 x2 Stopper
-  88059 x1 Plastic Shim
-  224210 x1 Alum collar
-  88059 x1 3x8mm Washer

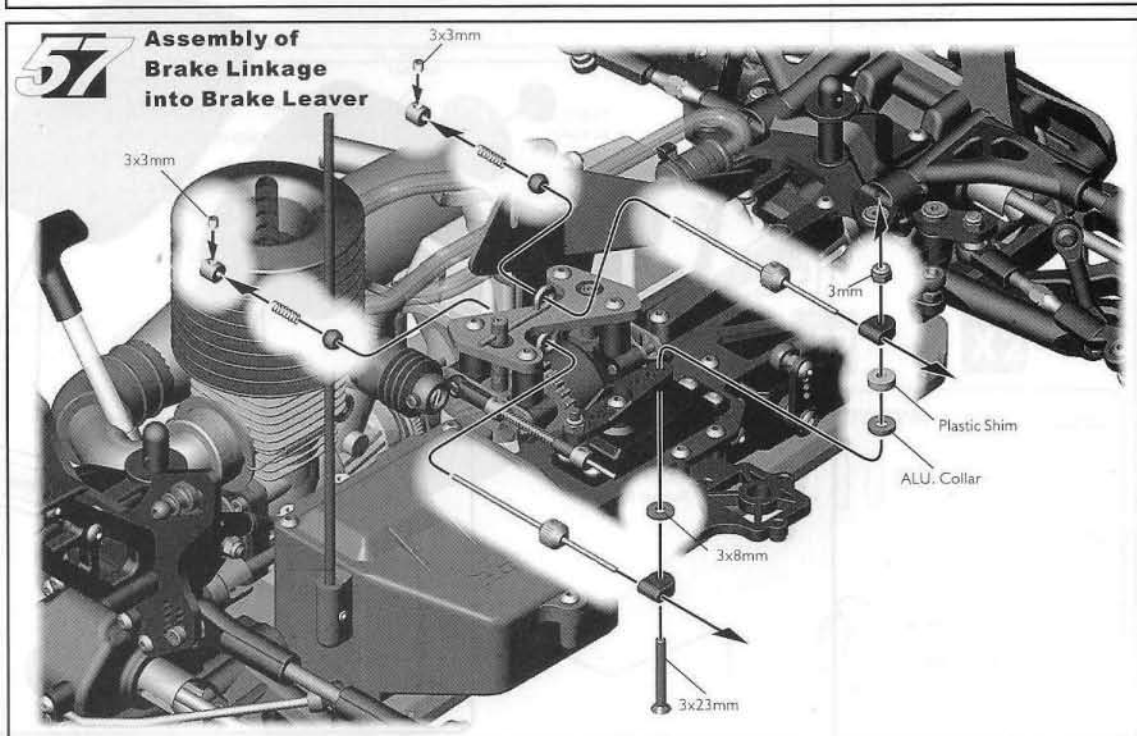



1 Setting neutral

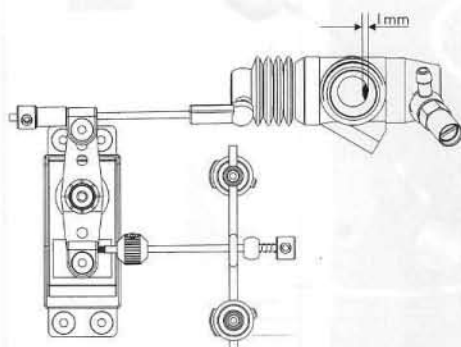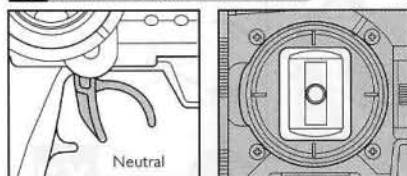



2 Setting full throttle

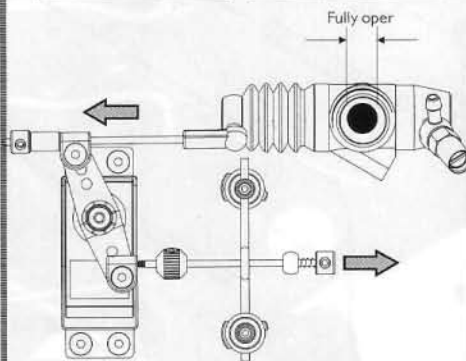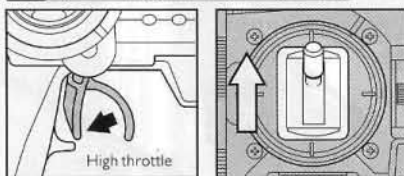



3 Setting full brake

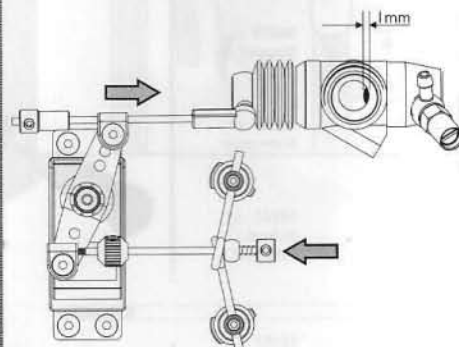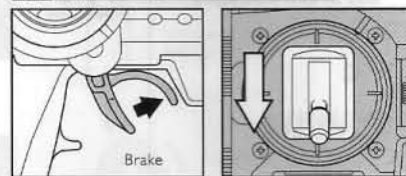



1 Neutral

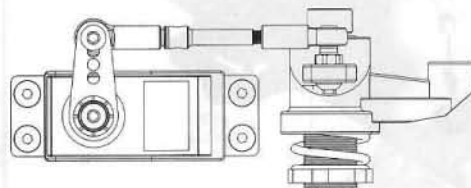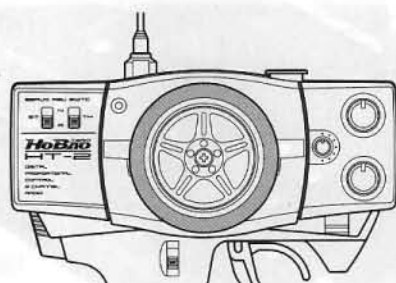

2 Left turn

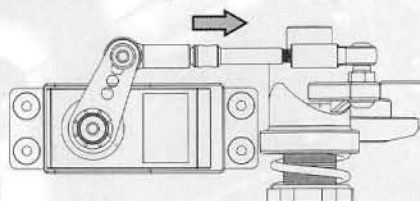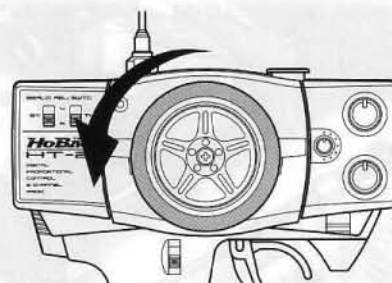

3 Right turn

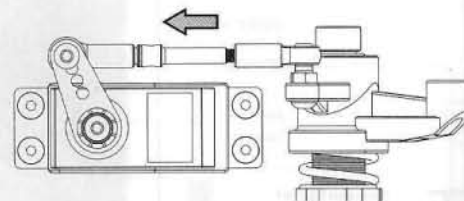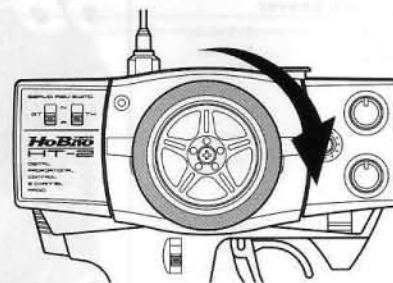


58 Assembly of Air Filter



31310T x2
3x10mm
TP/FH screw

58 Assembly of Air Filter

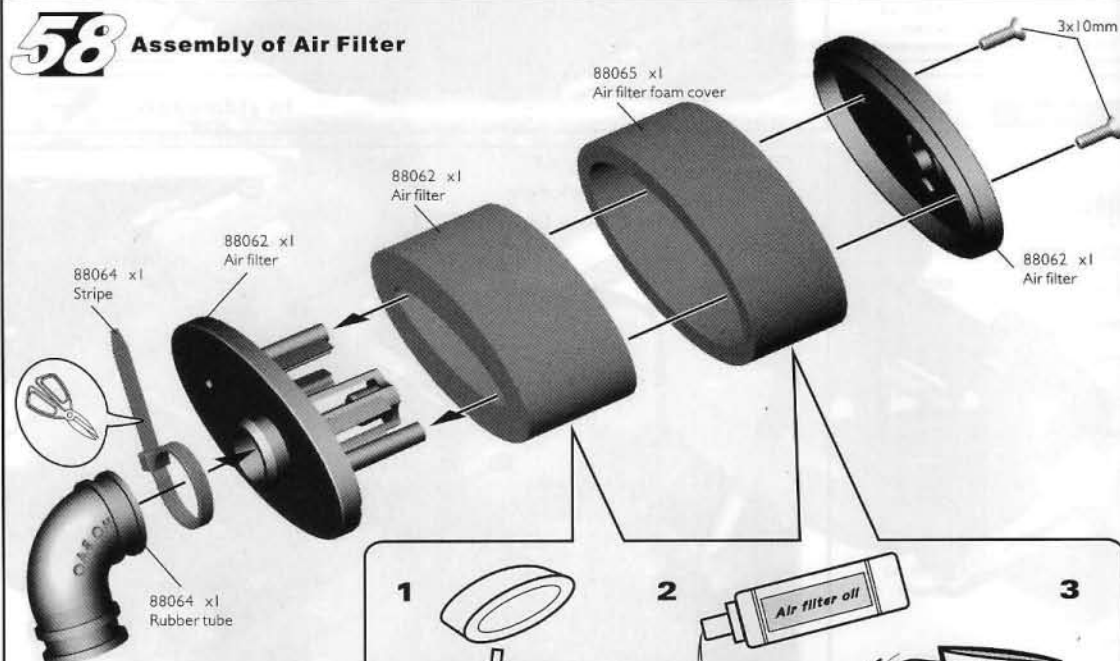

1

2

3

59 Assembly of Air Filter onto Engine

33308T x1
3x8mm
Tapping screw

60 Assembly of Side Guard

31310T x6
3x10mm
TP/FH screw

61 Assembly of Front and Rear Shocks-Step 1



86045x2
Shock body

86046x2
Shock body

87398 x8
Shock collar

87016 x4
Ball

87125 x2
87126 x2
2.6mm
Nylon nut

87125 x2
87126 x2
2.6x6.5x0.6mm
washer

87398 x8
O-ring



87126 x2
3.5mm
Rear shock shaft-standard

87125 x2
3.5mm
front shock shaft-standard


86048x4
Shock piston

87398 x4
C-clips

86050x4
Shock ball end

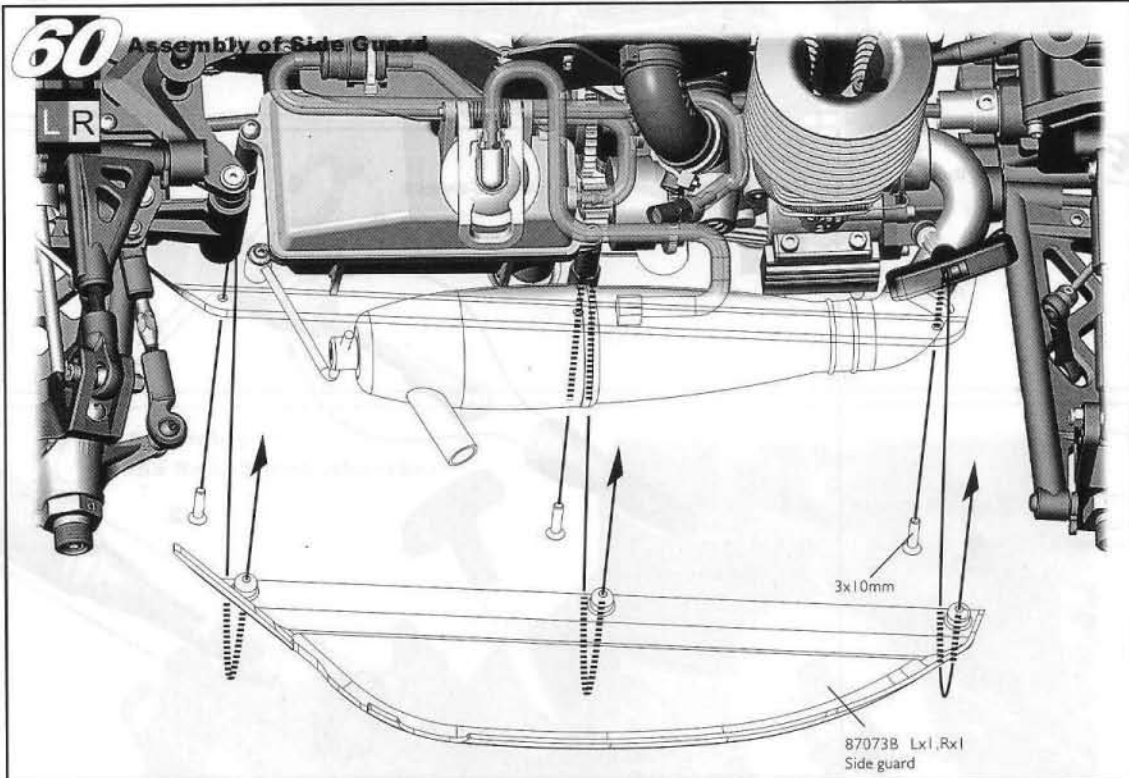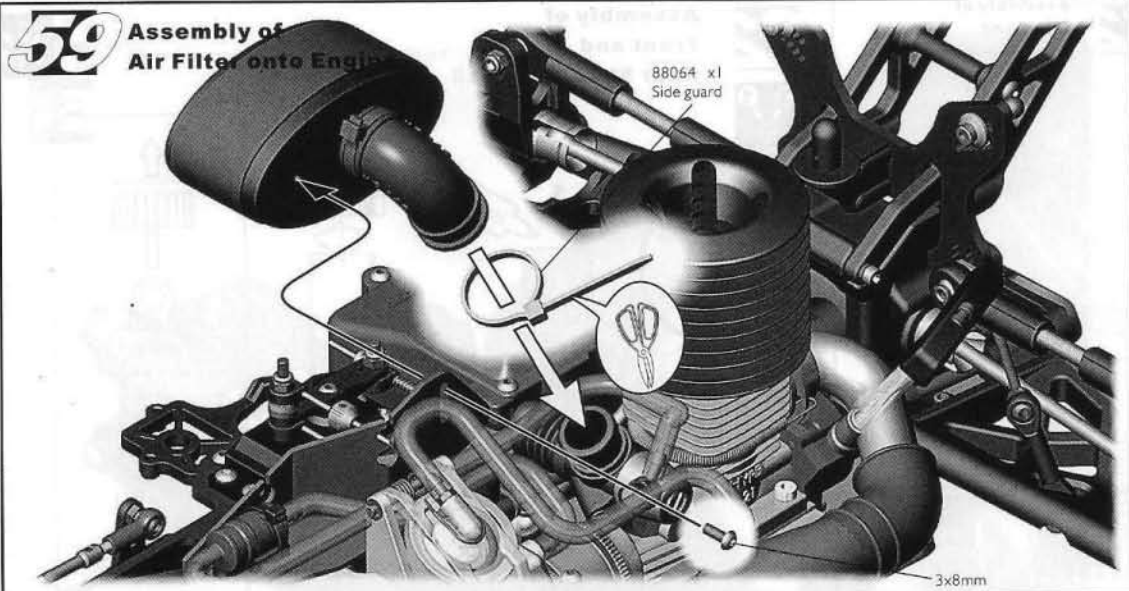

61 Assembly of Front and Rear Shocks-Step 1

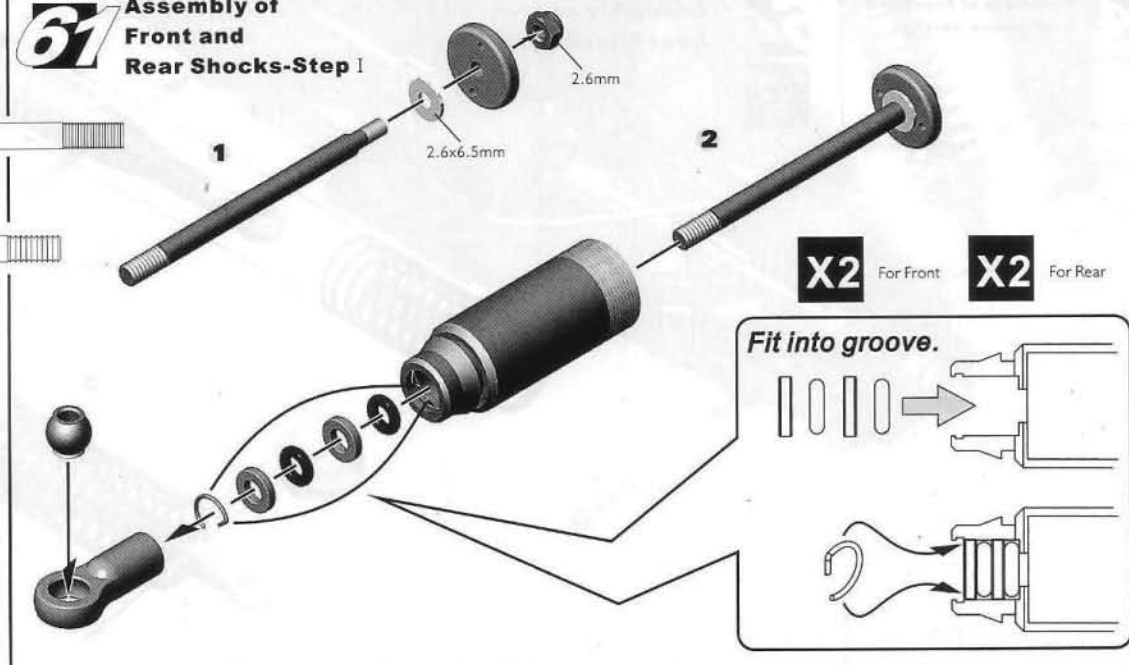

62 Assembly of Front and Rear Shocks- Step II



86049x4
Oil seal




86050x4
Shock ball head




86045x2
86046x2
Shock cap


62 Assembly of Front and Rear Shocks- Step II

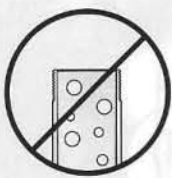

NO Bubbles

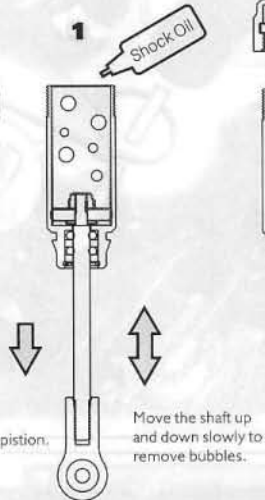


2

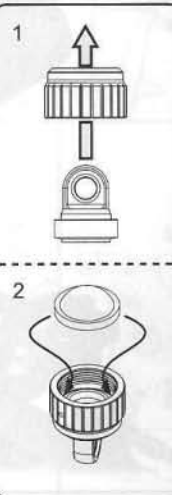


X2 For Front

X2 For Rear

 3




63 Assembly of Shock Shaft Dust Covers

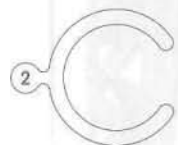

86050x4
Plastic shock parts



 86050x4
Shock spring cap




87018 x4
Shock boots

63 Assembly of Shock Shaft Dust Covers



Cut off front shock only.

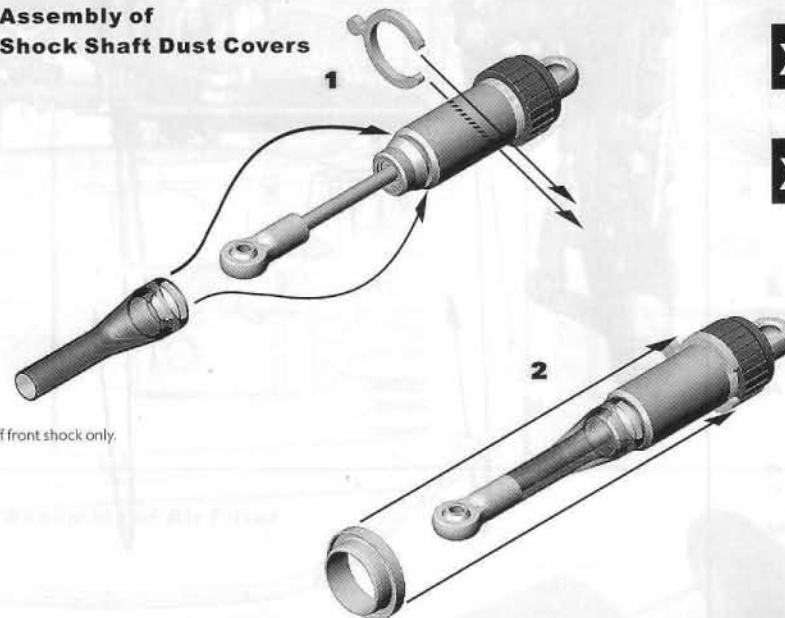


X2 For Front

X2 For Rear

64 Assembly of Front and Rear Shock Springs




86050x4
Shock spring supporter

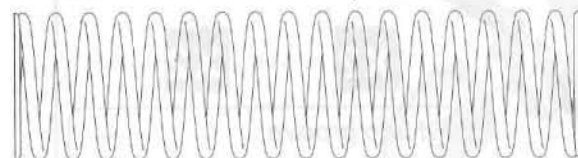

For Front

88095x2
Shock spring

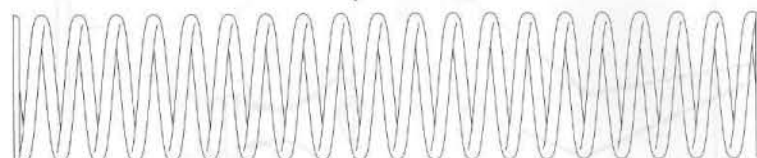


For Rear

88095x2
Shock spring

64 Assembly of Front and Rear Shock Springs




(Short)-For Front
(long) -For Rear

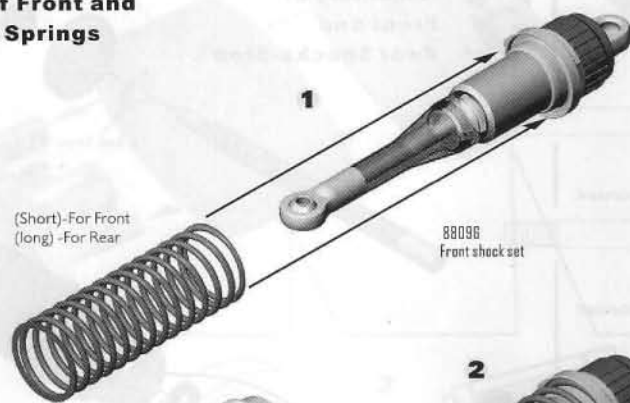

X2 For Front

X2 For Rear

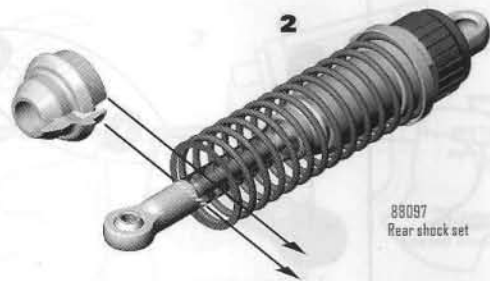


65 Assembly of the Front Shock Absorber

32322 x2
3x22mm
Cap screws




65 Assembly of the Front Shock Absorber

LR

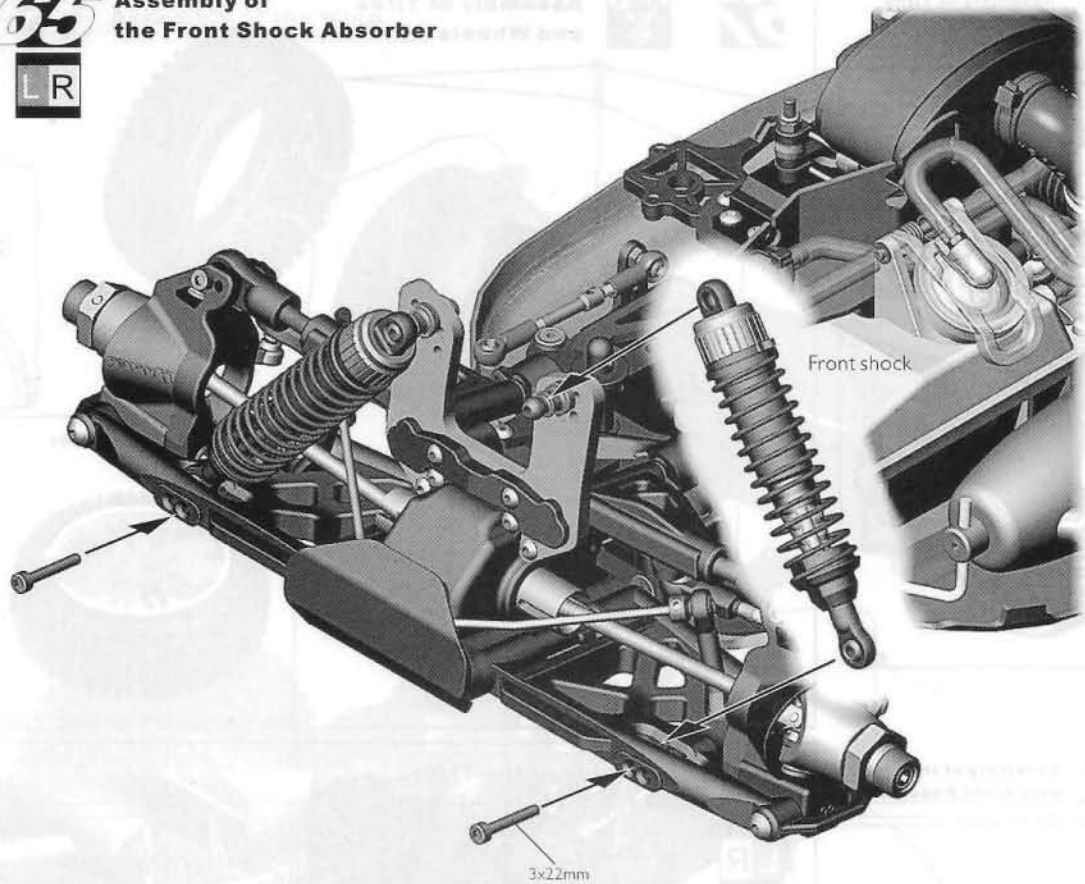


66 Assembly of the Rear Shock Absorber

32322 x2
3x22mm
Cap screws

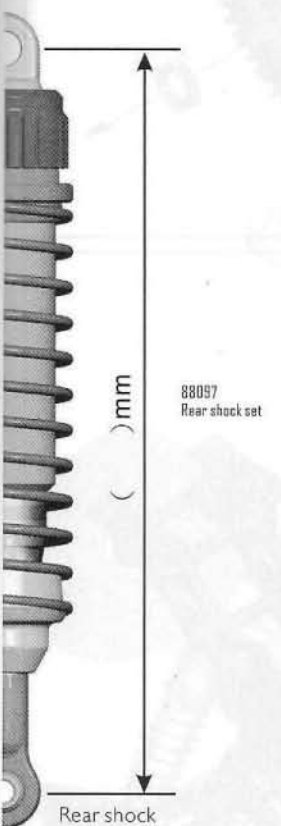

66 Assembly of the Rear Shock Absorber

LR

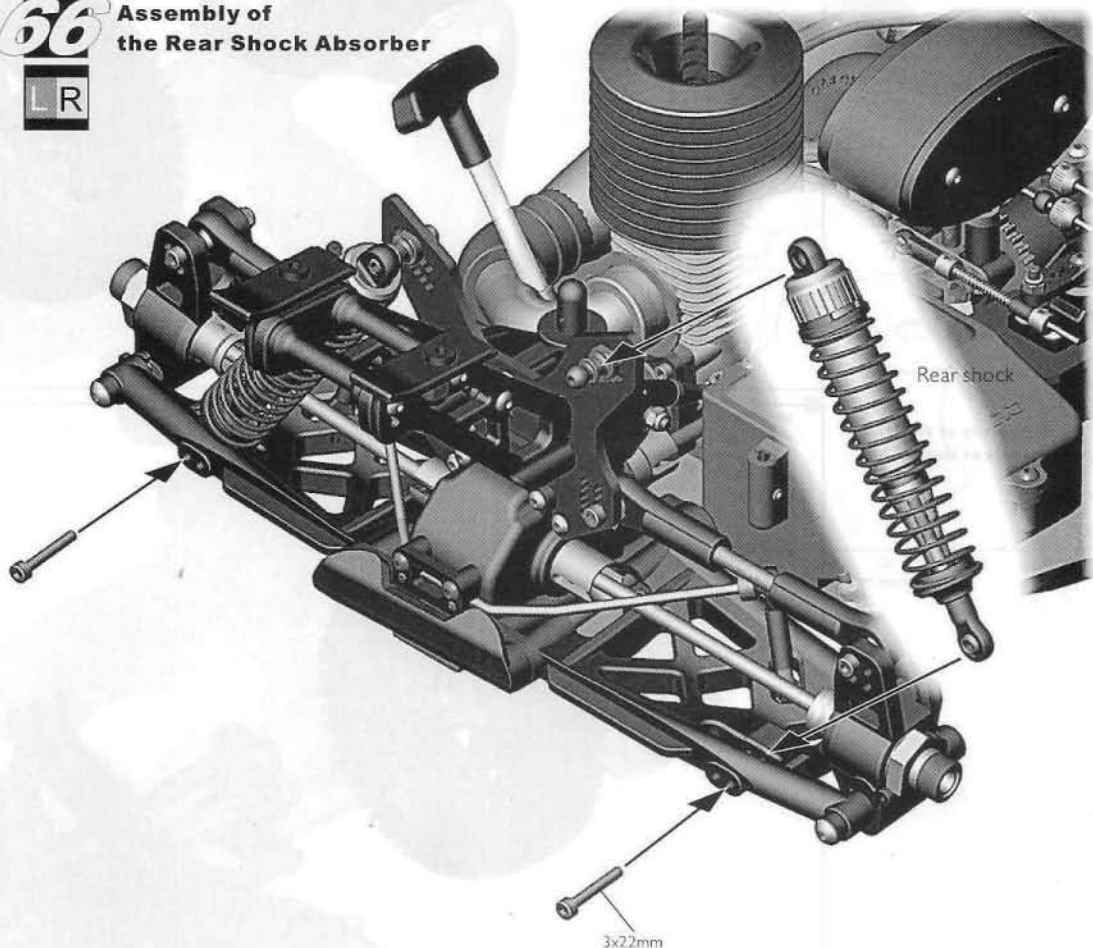

67 Assembly of Tires and Wheels

67 Assembly of Tires and Wheels


! NOTICE



Right
X2




Left
X2

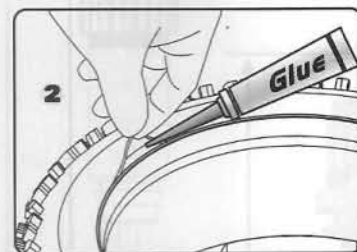


Apply glue on both sides




68 Assembly of the Tires onto Front Knuckles

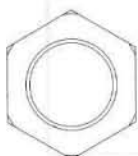


87027 x2
Hex wheel hub

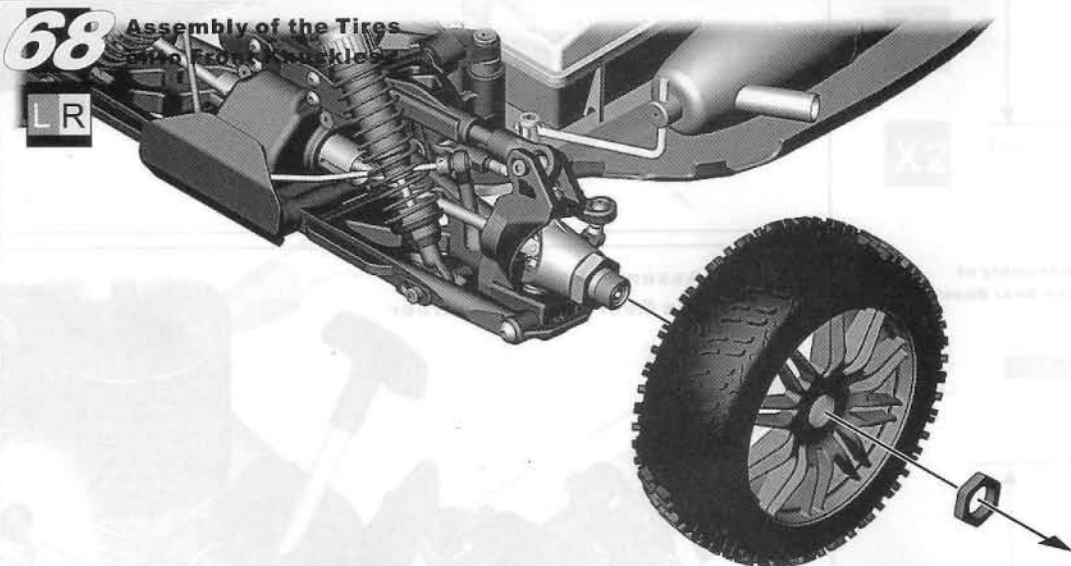

69 Assembly of the Tires onto Rear Hubs

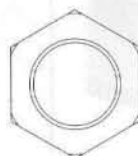


87027 x2
Hex wheel hub

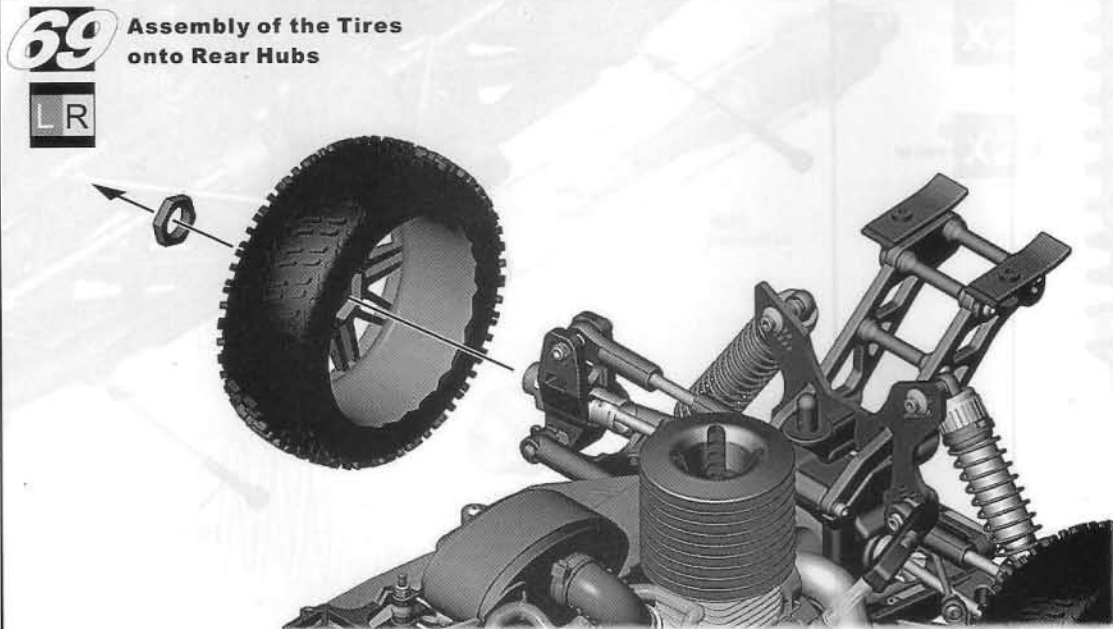

70 Assembly of the Wing



- 88036 x2
3x14mm
Cap screws
- 88035 x2
Wing Washer
- 88035 x2
3mm
Nylon nut

70 Assembly of the Wing

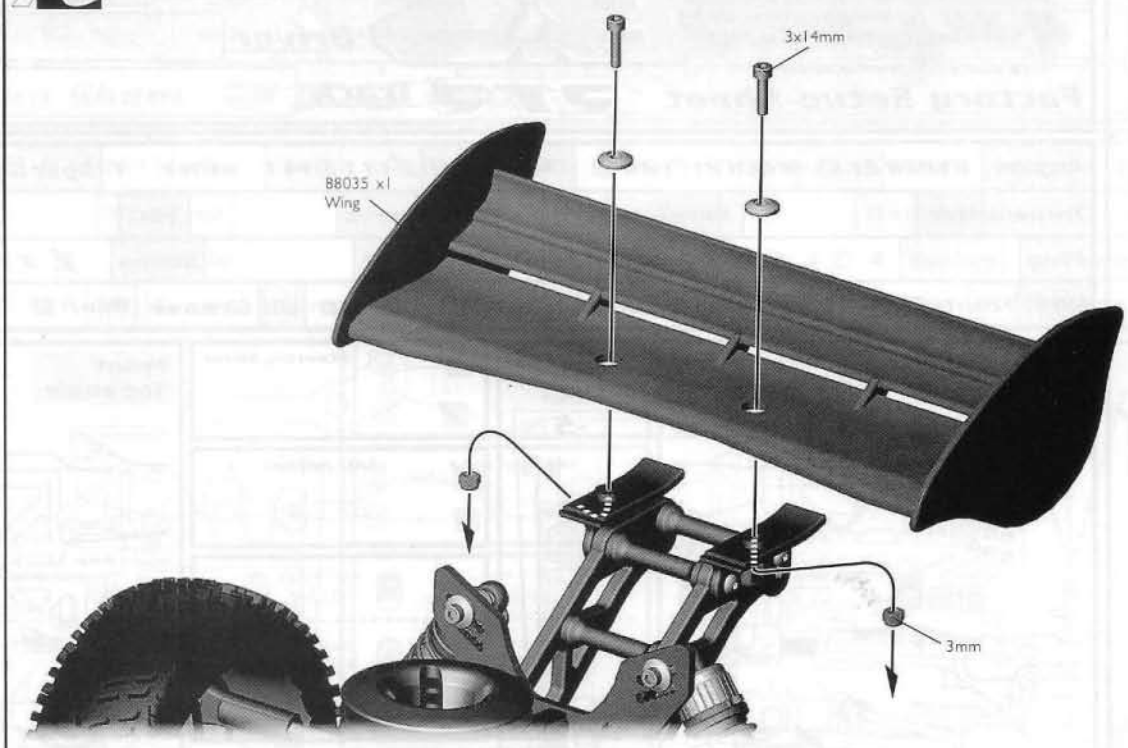




71 Assembly of the Body Shell Mounting

- 87375 x2
Snap pin


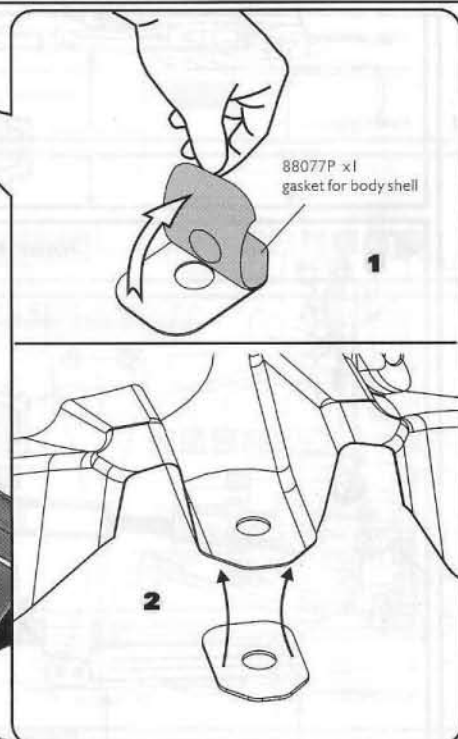
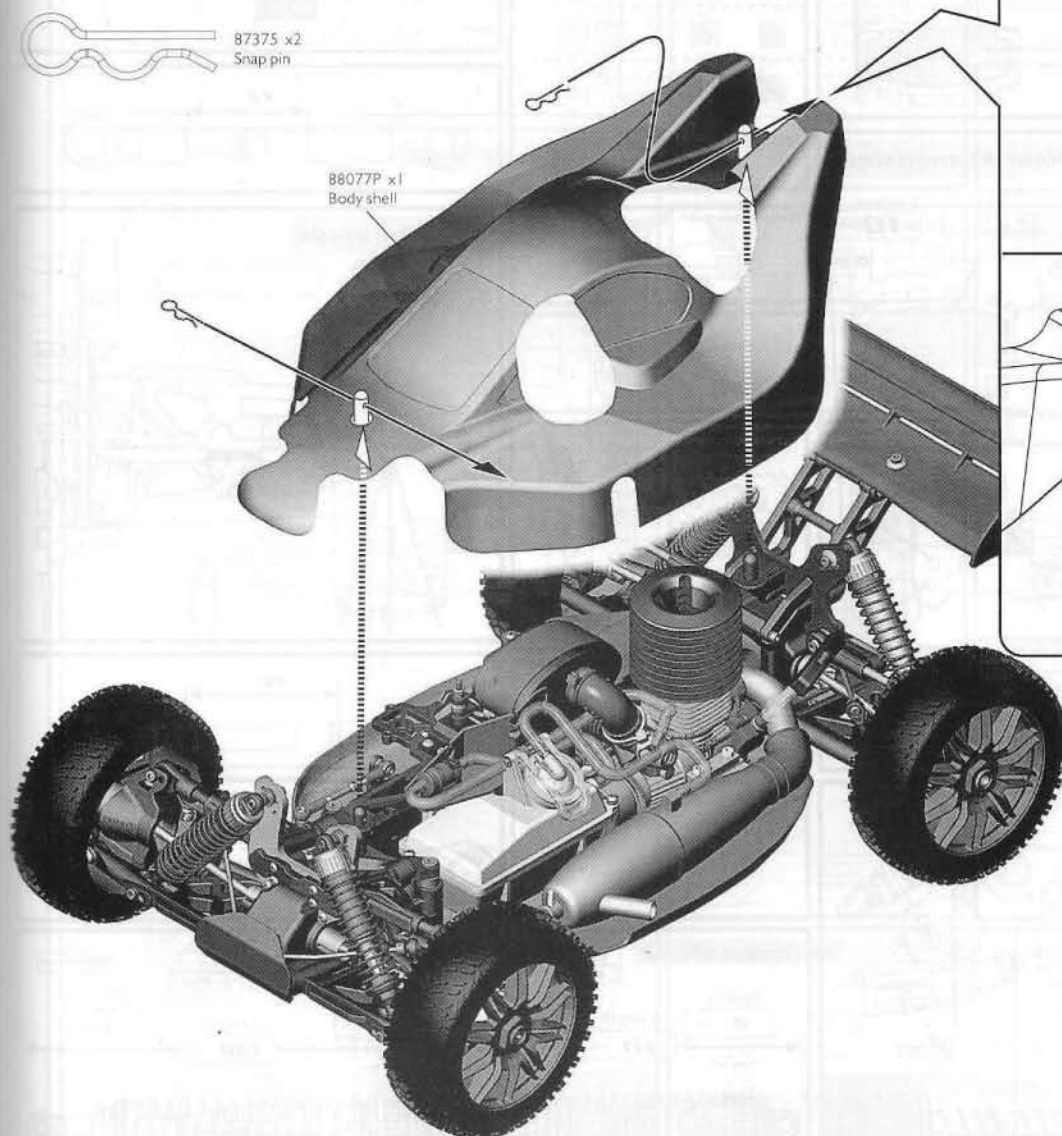


Engine	HYPER 21	MACH 21	28	Clutch ball	13 T	14 T	other	T	Spur Gear	46 T	other	T
Transmitter		Receiver		Servo		ESC		Battery				
Plug		Muffler		Fuel		Shoes	3	4	Spring	1 mm		
Diff	Front: ☐	LSD	Oil	Grease	Center: ☐	LSD	Oil	Grease	Rear: ☐	LSD	Oil	Grease





Front Suspension

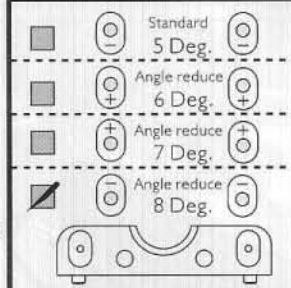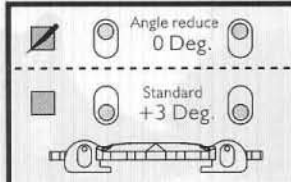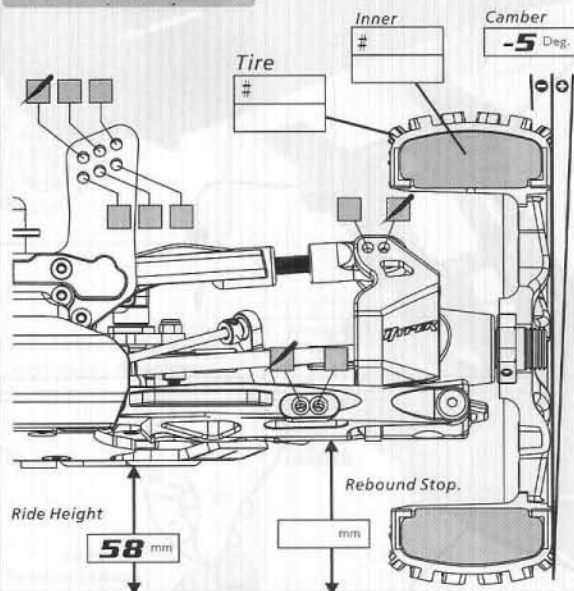





Front Toe angle

 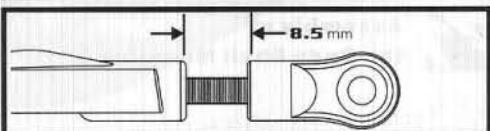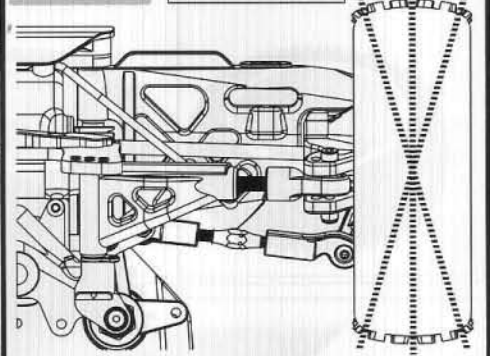


Rear Suspension

 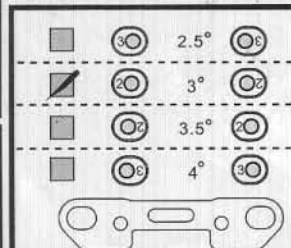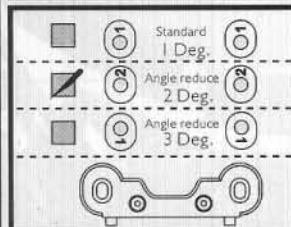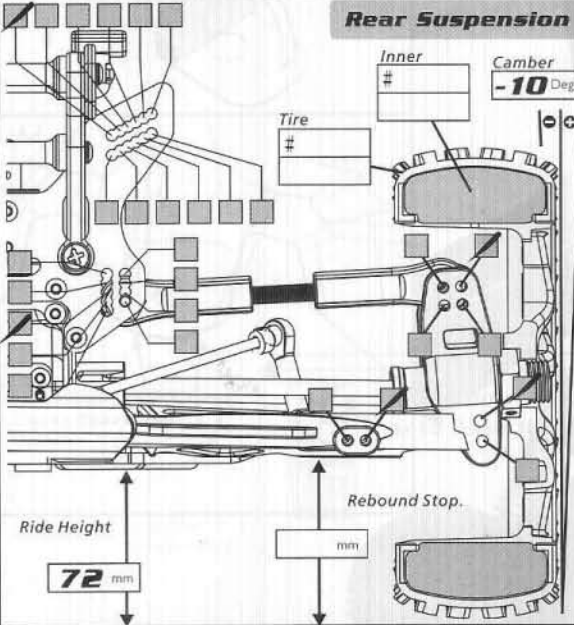


Rear Toe angle

  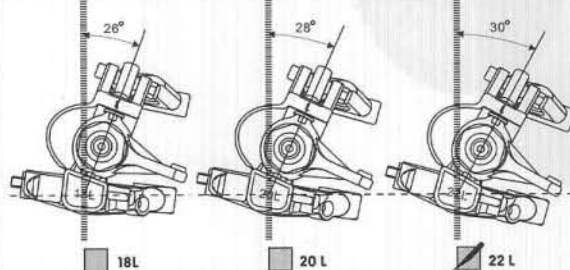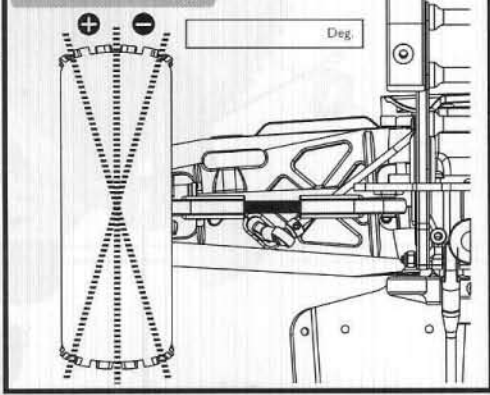

Front Shock

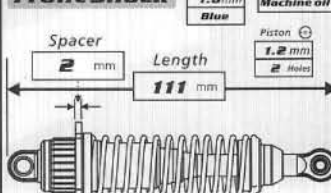

Rear Shock

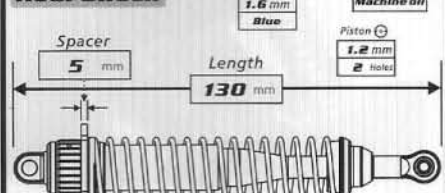


Engine ☐ HYPER 21 ☐ MACH 21 ☐ 28 ☐ Clutch ball ☐ 13 T ☐ 14 T ☐ other ☐ T ☐ Spur Gear ☐ 46 T ☐ other ☐ T

Transmitter Receiver Servo ESC Battery

Plug Muffler Fuel Shoes ☐ 3 ☐ 4 ☐ Spring mm

Diff Front: ☐ ☐ LSD ☐ Oil ☐ Grease Center: ☐ ☐ LSD ☐ Oil ☐ Grease Rear: ☐ ☐ LSD ☐ Oil ☐ Grease


Front Suspension

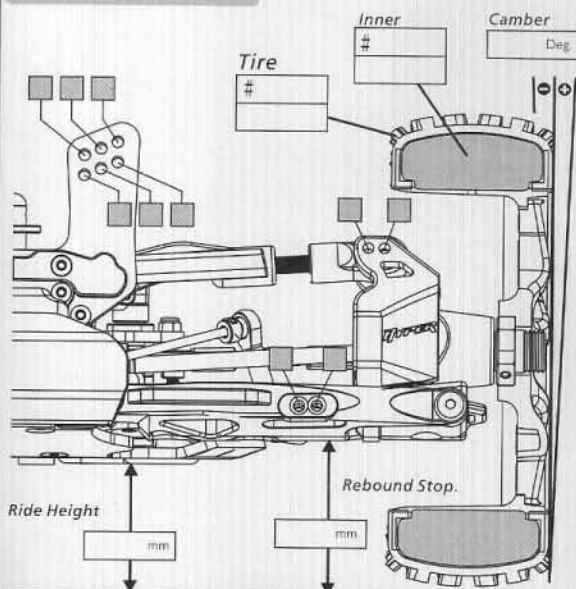

Steering Slider



 Anti-roll bar



Angle reduce 0 Deg.

Standard +3 Deg.

 


Standard 5 Deg.

Angle reduce 6 Deg.


Angle reduce 7 Deg.

Angle reduce 8 Deg.

Front Toe angle

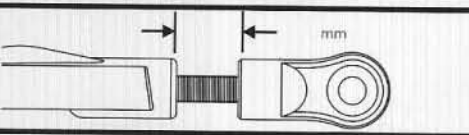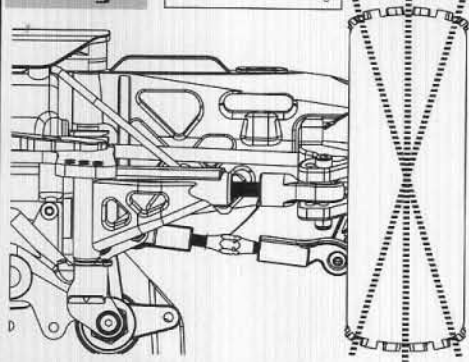


Rear Suspension

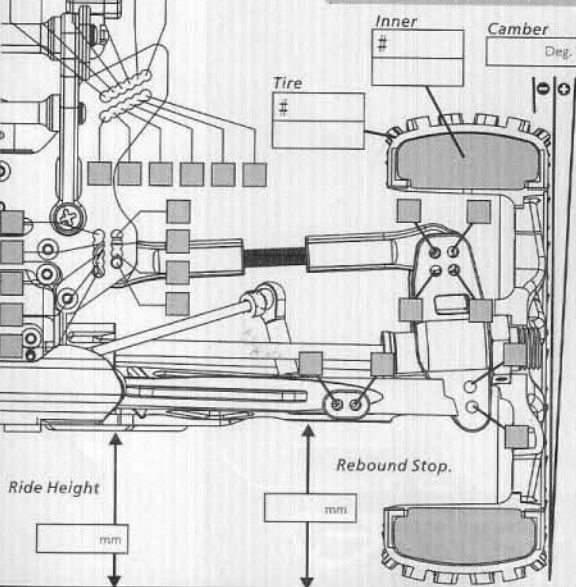

Wing Position



 Anti-roll bar







Standard 1 Deg.


Angle reduce 2 Deg.

Angle reduce 3 Deg.

  
Rear Toe angle

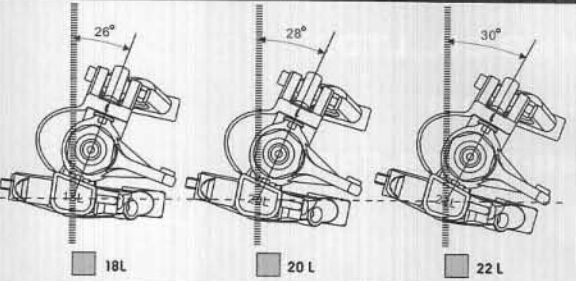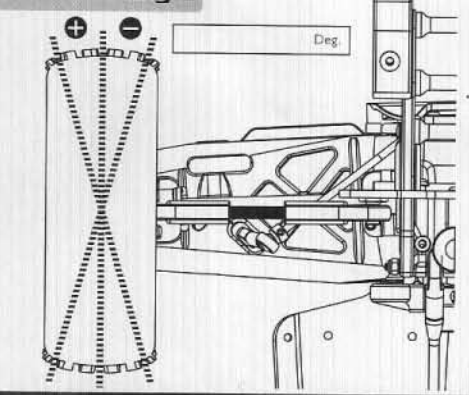

Front Shock

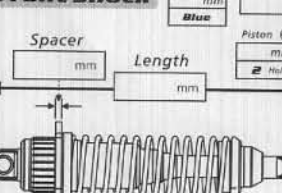

Rear Shock

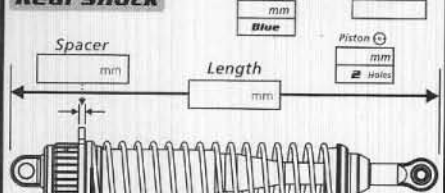



HO BAO ENTERPRISING CO.,LTD.

www.hobao-racing.com

E-MAIL:hobao@hobao-racing.com